 


GRANDSTAND

COLOUR PROGRAMMABLE

OPERATION MANUAL

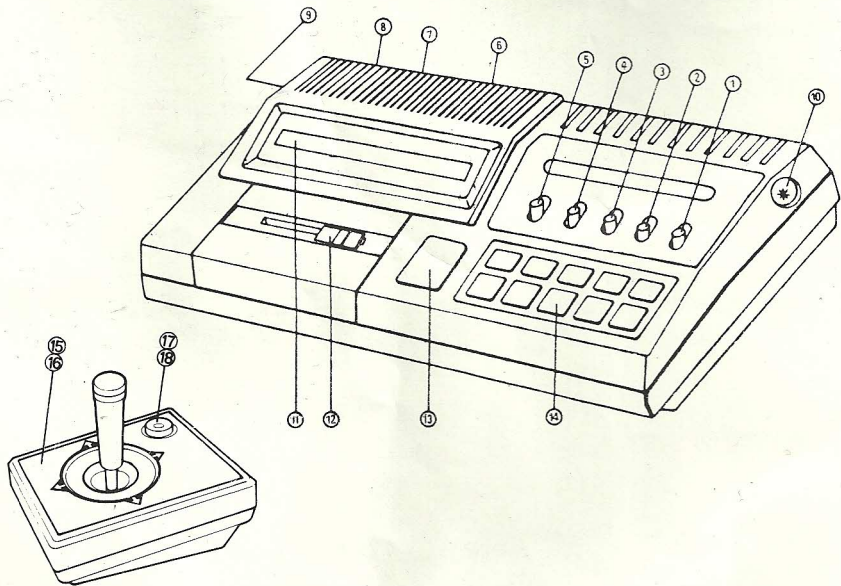

CONTROLS:

1. POWER ON/OFF Control
2. SPEED Switch
3. TEAM – R Switch
4. TEAM – L Switch
5. SERVE Switch (Auto/Manu)
6. GUN Input DIN Socket
7. Antenna Cable
8. External Power Input Jack
9. DIN Socket For Left Joystick Control
10. DIN Socket For Right Joystick Control
11. Plug-In Cartridge Socket
12. Volume Control
13. Game RESET Button
14. Game Select Buttons
15. 16. Left And Right Control Box
17. 18. SERVE/FIRE Buttons

Your Programmable Video System is one of the most advanced forms of Video Home Entertainment. Its plug-in cartridges insure against obsolescence. Your console can be played on any size TV screen, in black and white or color.

POWER

Your Programmable Video System can be powered by six UM-2 batteries or AC adaptor.

1. Batteries: Remove the battery compartment door. Install six UM-2 "C" size batteries as indicated. Be sure to observe proper polarity or the game will not work and damage may occur to the electronic circuitry.
2. AC adaptor (battery eliminator) plug the adaptor into the mains (AC line). Plug the jack into (8) socket. The adaptor must be 9V at 150 mA with a positive center pin.

Note: It is advised that batteries should be removed from the console when using the adaptor.

INSTALLATION

1. Attach antenna cable (7) to the terminals of your TV set.
2. Attach the Left (15) and Right (16) control boxes to their respective socket (9) (10).
3. Plug in AC adaptor to its socket (8). (If batteries are to be used, install the batteries).

SET UP

1. Install cartridge in its nest (11). It is recommended that the SUPERSPORTIC cartridge should be used for initial set up. DO NOT FORCE the cartridge to be seated, it is keyed to fit into its nest when the label side of the cartridge faces the game select buttons.
2. Turn on the TV set.
3. Turn on the programmable (1), set switch (5) to AUTO' press reset button (13).
4. Turn channel selector of the TV set to the proper channel as indicated on the bottom of the console.
5. Adjust the fine tuning for the best picture.
6. You are now ready to play.

Note: Do not adjust your TV set without a cartridge in place.

Turn off the game (1) when inserting or removing cartridges.

Read the instructions on the individual cartridges as some of the controls differ in function.

