








# PHILIPS

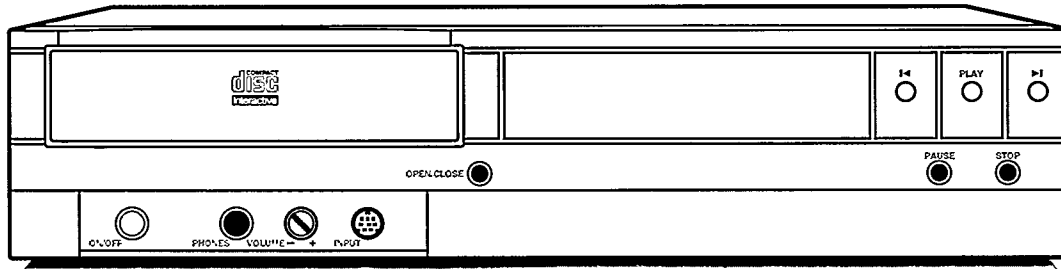

## CDI 205

Owner's manual

CDI 205 /05

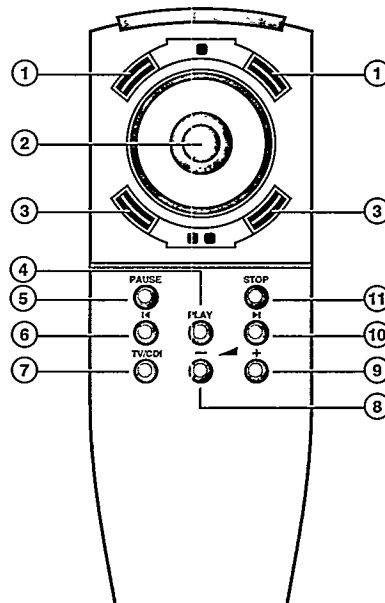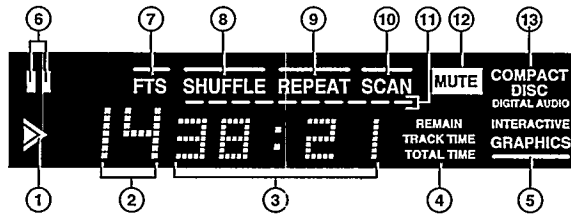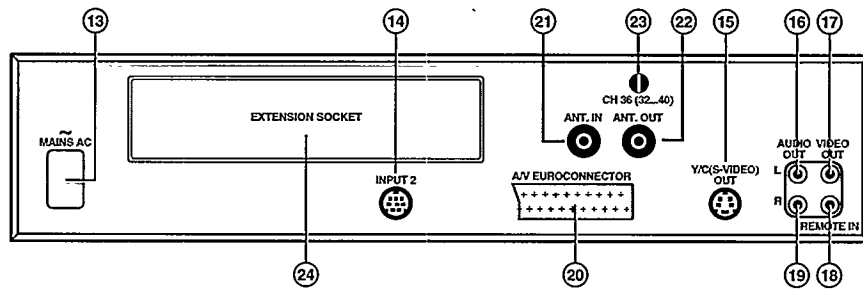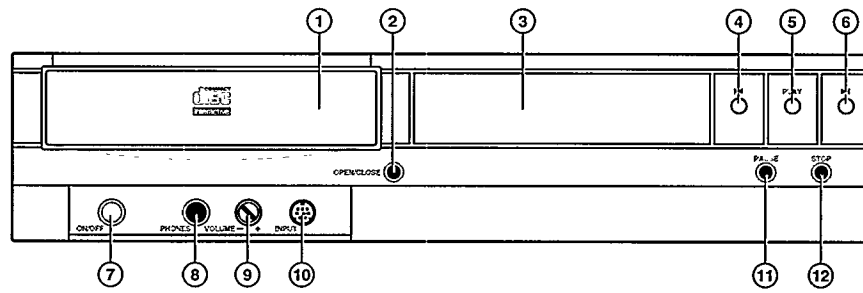

## DESCRIPTION OF CONTROLS AND CONNECTIONS

### FRONT

- 1 Disc loading tray with "touch to close" action
- 2 Open/close button
- 3 Soft tone multifunction display with infra-red remote control receiver
- 4 Previous track selection button
- 5 Play button
- 6 Next track selection button
- 7 AC power on/off button
- 8 Headphones jack
- 9 Headphone volume control
- 10 Input port for CD-I pointing devices
- 11 Pause button
- 12 Stop button

### REAR

- 13 Mains AC (alternating current) input jack
- 14 Input2 port for CD-I pointing devices, keyboard or RS232 connection
- 15 Y/C (S-video) output
- 16 Audio output L
- 17 Video output (CVBS)
- 18 Remote control input
- 19 Audio output R
- 20 A/V Euroconnector\*
- 21 TV Antenna input\*
- 22 TV Antenna output\*
- 23 Channel selector\*
- 24 Extension socket (for 22ER9141)\*

### DISPLAY PANEL

- 1 Disc playing (stepping indicator)
- 2 Track number (CD-Audio)
- 3 Elapsed or remaining time (CD-Audio)
- 4 Time indicators
- 5 Remote control active (flashing indicator)
- 6 CD pause active
- 7 CD FTS active
- 8 CD shuffle active
- 9 CD repeat active
- 10 CD scan active
- 11 CD scan timing strip (stepping indicator)
- 12 Mute indicator\*
- 13 Type of disc indicator

### REMOTE CONTROL

1. Infra red remote control
- 1/3 Action buttons (for left or right handed operation)
2. Thumbstick
- 4 Play button
- 5 CD pause button
6. CD previous track selection button
- 7 Audio mute button / CD-I/TV button\*
- 8 Volume down button
- 9 Volume up button
- 10 CD next track selection button
- 11 CD stop button

\*Availability on some player versions only

## TABLE OF CONTENTS

	Page
Description of controls and connections	1
Introduction	1
Getting Hooked up	2
Before using your CD-I player	3
Setting up	3
Disc play	4
Before requesting service	6
Warranty	7

## INTRODUCTION

We are pleased to introduce you to one of the most innovative products available today. Your CD-I (compact disc-interactive) player is principally intended for playing the new CD-I discs. You'll be surprised how easy it is! Once correctly hooked up to your TV, you simply "point-and-click" to explore the intriguing new world of interactive CD-I.

Your CD-I player also plays audio compact discs and audio tracks from 5 inch laser discs and CD-ROM discs.

Depending on the CD-I player version it can play in addition also one or more of the following disc types:

PHOTO-CD  
CD-I READY  
CD-I BRIDGE  
CD Graphics (CD+G)

We are confident that you will find this product surprisingly easy to use, and quite unique in its fascination.

## PURCHASE DETAILS

For a reference description of the CD-I player, record the serial and model numbers in the spaces provided here. These numbers are located on the tab on the back of the player. Please attach your sales receipt to this manual and keep it near the player for quick reference.

Date of purchase.....

Purchased from.....


Model no:.....

Serial no:.....

## SAFETY PRECAUTIONS

Only a qualified service person should remove the cover or attempt to service this device.

**Caution:** use of controls or adjustments other than those specified herein may result in hazardous radiation exposure or other unsafe operation.

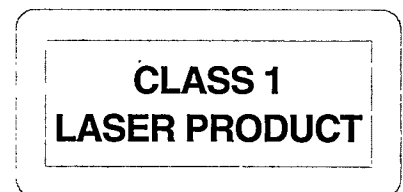

# GETTING HOOKED UP

## PLACEMENT


Place the player on a firm flat surface. Keep away from heat sources and direct sunlight. In a cabinet, allow 1 inch (2-3 cm) of free space all around the unit for adequate ventilation.

## CONNECTIONS

For any optional connection accessories you require contact your supplier.  
**Caution:** never make or change connections (other than the headphone) with the power switched on.


### Video

**1 Antenna connection** (available on some player versions only).

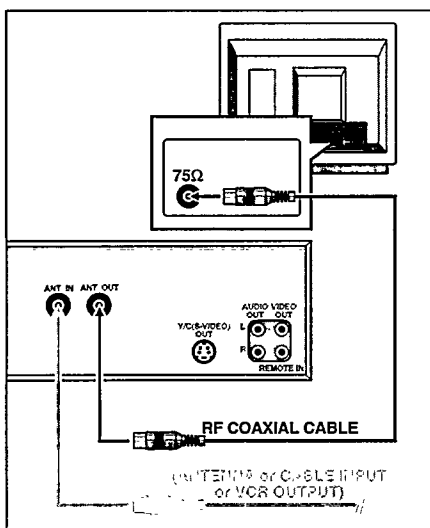

All you need to do is connect the player to the TV antenna input. If you already have a VCR (or antenna or cable) connected to the TV antenna input and your CD-I player has an antenna input, connect the CD-I player between the VCR (or antenna or cable) antenna output and the TV antenna input, otherwise use an optional external switchbox.


Your CD-I player sends pictures and sound to your TV on the channel number indicated on the rear or on the channel selector position indicated at the rear. This signal is sent through the coaxial cable. To operate the player with your TV, set your TV to the same channel.

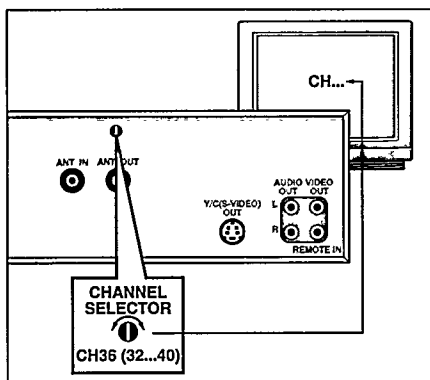


If your CD-I player has a channel selector (located at the rear) you can avoid local interference by selecting a different channel.

If your TV and CD-I player have other matching connection possibilities, you will get a better picture quality by using these inputs.


**2 Connection to a TV with a Y/C (S-Video) socket.**

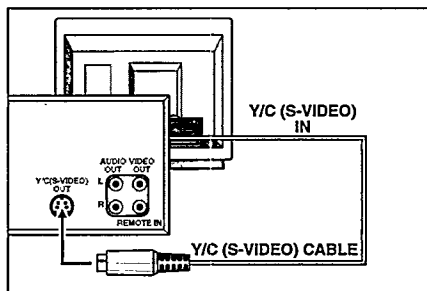

**3 Connection to a TV with a video (CVBS) socket.**

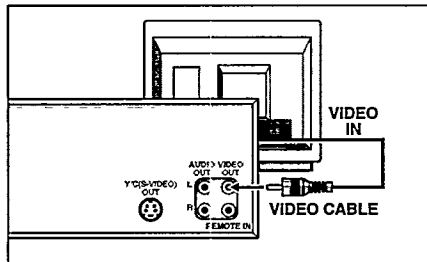

**4 Connection to a TV with a AV/Euroconnector socket** (available on some player versions only).

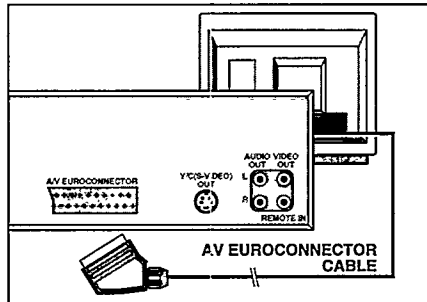


**Note:** Please refer to the instructions that came with the TV-set for the selection of the channel or the input used.


### Audio

If you use the TV antenna input or the AV/Euroconnector, the TV will play sound along with the picture. If you use the Y/C (S-video) or video (CVBS) input, you will also need to connect the player's audio output to the TV's audio input. Better still, you can connect the player's audio output to the input of your HiFi system, provided that the player, TV and HiFi system are placed close to each other.

**1 Connection to the TV audio input.**

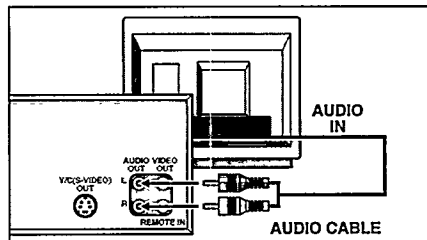

**2 Connection to the HiFi system.**

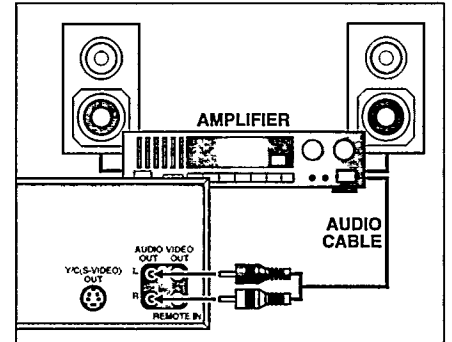

**Caution:** Do not connect the player's audio output to the HiFi phono (record player) input.


### Pointing device

To operate your CD-I player a pointing device is needed (The pointing device supplied with your player depends on the player version). For pointing devices other than the included pointing device please consult your supplier.

**1 Infra red remote control.**

Loading the batteries in the remote control

- remove the battery compartment lid.
- Insert two "AA" (R6 or SUM3) batteries as indicated inside the battery compartment.
- Replace the lid.

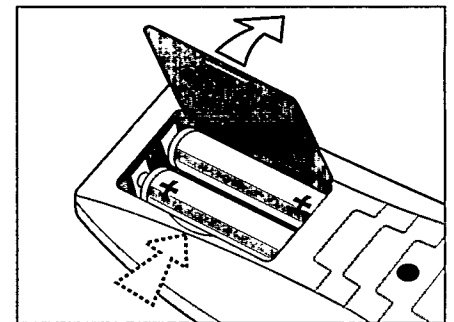


**Caution:** Do not mix old and new batteries. Also never mix different types of batteries (standard, alkaline and so on)

**Note:** To avoid wasting power, make sure that the thumbstick is never accidentally kept deflected either in use or in storage.

This remote is set up to operate only your CD-I player.

**2 Wire connected devices such as mouse, trackerball, joystick or graphic tablet.**

Plug the pointing device connector into an input port for pointing devices on the CD-I player (input at the front or input2 at the rear) insert the connector with the arrow at the top.

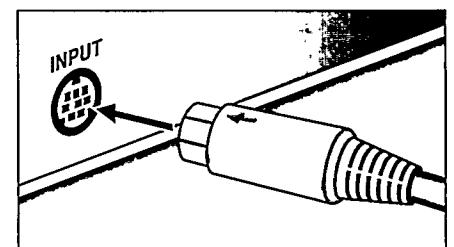

## GETTING HOOKED UP

### Note:


- A pointing device connected at the front panel can be used alternately but not simultaneously with the "thumbstick" remote control.
- Connecting a pointing device only at the rear panel immobilizes the "thumbstick" remote control, except in certain programs for two persons.

### 3 Precautions

Pointing devices are sensitive precision instruments. Handle them with care, keeping in mind the following precautions:

1. Avoid dropping or knocking
2. Do not use them in locations subject to extreme temperatures, humidity, dust or vibration.
3. Never hold the pointing device by the cable.
4. Never pull on the cable to disconnect the pointing device from the player.

If a mouse is used, cleaning might be required from time to time to remove the particles picked up by the ball. To clean the mouse:

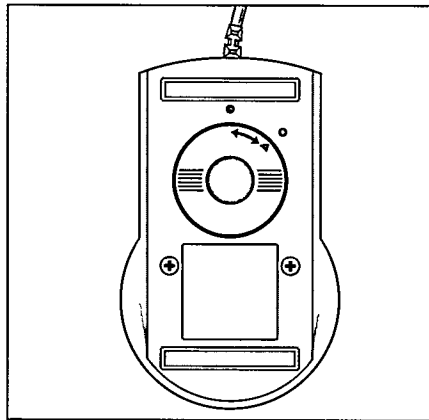

1. Disconnect the mouse.
2. Hold the mouse upside down in one hand with the cable pointing away from you.
3. Using one finger on either side of the ball re-

tainer on the bottom of the mouse, rotate the triangle mark anti-clockwise from one circle mark to the other.

4. Hold your free hand under the mouse to catch the retainer and ball, then turn the mouse over.
5. Use only a clean, soft, dry cloth to wipe the ball clean. Never use cleaning fluid or tissue.
6. Gently wipe the inside of the mouse housing to remove dust or dirt.
7. Replace the ball in its housing, then re-insert the retainer and lock it by rotating the triangle mark clockwise from one circle mark to the other.

### Power connection

Check if the mains voltage indicated at the rear of the player matches the voltage of the AC outlet. Connect the female end of the AC (alternating current) cord supplied into the AC socket on the player rear panel. Plug the male end of the cord into an AC outlet.

### IMPORTANT NOTE FOR UK USERS


Some versions are supplied with moulded plugs. To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover (A) and fuse (B).
2. Fix new fuse which should be a BS 1362 5 A, A.S.T.A. or BSI approved type.

### Important

- The fuse cover must be refitted when changing a fuse.
- In the event of a fuse cover being misplaced, the plug must not be used until a correct replacement is fitted.
- Please ensure that the replacement fuse cover is of the same colour as the insert or as the colour embossed in words on the base of the plug.

If the fitted plug is not suitable for your socket outlet, it should be cut off and disposed of, to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

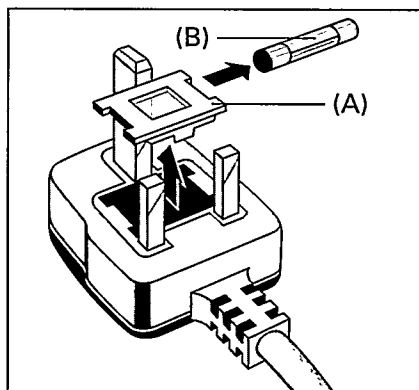

### FITTING A MAINS PLUG (U.K. ONLY)

The wires in the mains lead are coloured: Blue - Neutral, Brown - Live

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- The Brown wire must be connected to the terminal which is marked with the letter L or coloured Red.
- The Blue wire must be connected to the terminal which is marked with the letter N or coloured Black.

**No connection** should be made to the earth terminal of the plug! For plug 13A plugs, conforming to BS 1363, use a 3 A fuse. For other plugs, use a 5 A or lower fuse in the plug, adapter or at the distribution board.

## BEFORE USING YOUR CD-I PLAYER


### REMOVING THE TRANSIT PAD

- Press the on/off button on the player.
- Press the open/close button on the player to open the disc tray.
- Take the transport pad from the disc tray.
- Press the open/close button on the player to close the tray.
- To avoid damages to the CD-I player when transporting, keep the transport pad and reuse it whenever you are transporting the player.

### REMOTE CONTROL INTERACTIVE OPERATION

For normal interactive operation, use the "thumbstick" remote control to select functions displayed on the TV screen. Simply:

- Aim the remote control at the player.
- Move the thumbstick to point the cursor arrow on the screen to the required function. The cursor arrow movement corresponds to the direction in which the stick is moved. The arrow moves faster if the stick is moved further.
- Click on one of the action buttons.

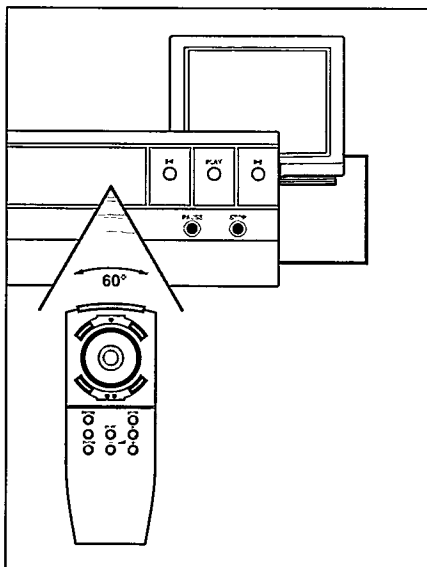

The function selected by this "point-and-click" technique is highlighted to confirm the selection.

**Note:** To "point-and-click" on any screen shown in this manual, any one of the four action buttons can be used. Within CD-I programs, you may find that the "■" buttons and the "■ ■" buttons have different functions.

### WIRED POINTING DEVICE OPERATION

Place the pointing device in front of the display screen, with the back (the cable end) pointed towards the screen. Now, as you roll the mouse, the trackerball or use the graphic tablet, the cursor moves in the corresponding direction on the screen. When the cursor is positioned on the required function click on one of the action buttons.

The function selected by this "point-and-click" technique is highlighted to confirm the selection.


**Note:** To "point-and-click" on any screen shown in this manual, any one of the four action buttons can be used. Within CD-I programs, you may find that the "■" buttons and the "■ ■" buttons have different functions.

# SETTING UP

## START-UP

- Press the power on/off button on the CD-I player, and check that the player display lights.
- Switch on the TV (and HiFi system if used).
- Select the CD-I input on the TV (and HiFi system if used).
- On the TV, the player start-up screen appears.

### PLAYER START-UP SCREEN

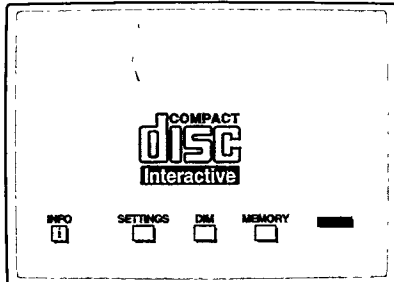


This screen has the following system function icons to guide and assist you. Select:

1. Info if you need help during start-up, or when playing CD-Audio discs. (available on some player versions only)
2. Settings to preselect your preferred start-up conditions.
3. Dim to reduce the screen brightness while the system is at rest.
4. Memory to refer to the intermediate results of CD-I titles and of FTS programs created for your CD-Audio discs.
5. Open/close to open or close the disc tray.

## INFO

(available on some player versions only)


### INFO SCREEN

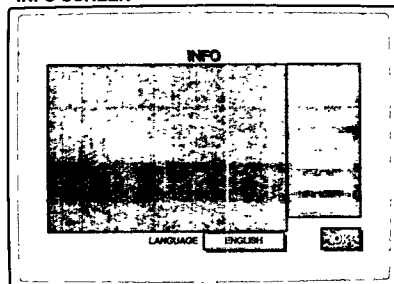

The info screens offer help related to the operating mode. Point-and-click on the function with which you need help.

If your player offers the feature to change languages, point-and-click on the language shown at the foot of the screen to get the full list, then point-and-click on your choice.

### INFO SCREEN

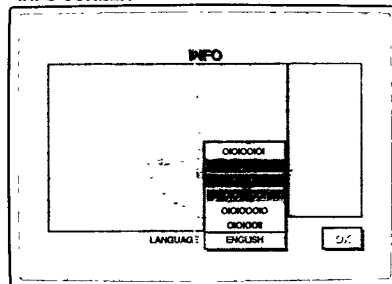


When finished, point-and-click on OK.

## SETTINGS

This screen allows you to change the player's settings. You can change the player's time and date and the way they are presented. For CD-Audio discs you can set repeat to repeat the whole disc or just the current track, set the scan time to 5, 10 or 20 seconds per track, and set the player to automatically select shuffle and/or FTS.

### SETTINGS SCREEN

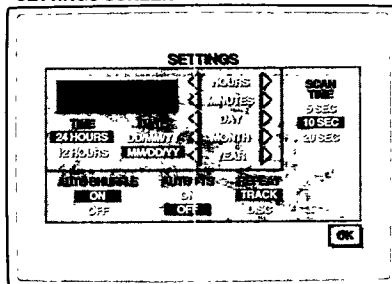

#### Time

Select 24 hour or 12 hour clock.

#### Date

Select dd/mm/yy to present the date in day-month-year sequence. Select mm/dd/yy to present the date in month-day-year sequence.

#### Time/date set

If the time or date shown on the screen is wrong, select the appropriate ► and ◀ arrows to set hours, minutes, day, month and year in turn, as required.

#### Scan time\*

Select the time you want the beginning of each audio track to play for when the scan function is activated.

#### Auto shuffle\* and auto FTS\*

For each of these functions, select "on" if you want the function to be activated automatically when a disc is loaded.

#### Repeat\*

Select to repeat a complete audio disc or a single track when the repeat function is activated.

When finished, point-and-click on OK.

**Note:** Functions marked \* are CD-Audio functions.


## DIM

Selecting dim greatly reduces the brightness of the displayed picture. To restore the normal brightness simply deflect the thumbstick.

On all screens shown in this manual except CD Graphics screen, dim occurs automatically if the player is not used for a while.

## MEMORY

### MEMORY SCREEN

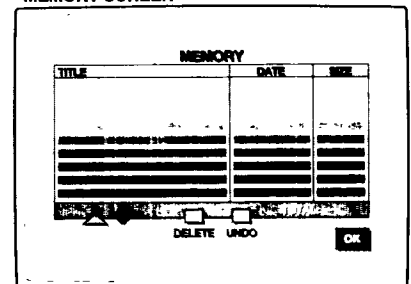

The memory screen shows the information held in memory: titles, dates and percentage of memory used. Use the scroll arrows to move up and down the list. To delete an item, click on its title and then click on delete. If you change your mind after deleting, click on undo.


When finished, point-and-click on OK.

## OPEN/CLOSE

This icon shows the command you can select, open when the disc loading tray is closed, close when it is open.

**LOADING**

Point and click on open (you may also press the open/close button on the player) to open the disc loading tray.

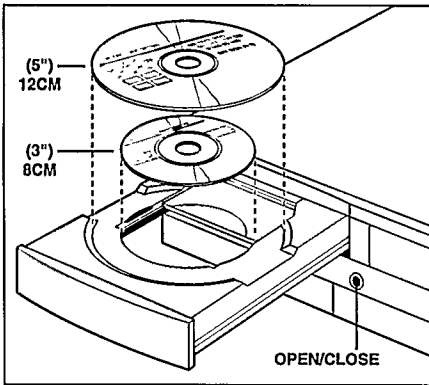

Take the disc from its holder and place it on the tray with the label up.

Point and click on close (you may also press the open/close button on the player, or gently push the front of the tray) to close the tray.

The TV screen changes according to the type of disc.

**Caution:** never put more than one disc at a time into the CD-I player

**UNLOADING**

Point and click on open (you may also press the open/close button on the player) to open the disc loading tray. The player start-up screen reappears on the TV.

Take the disc from the tray and replace it in its holder.

Point and click on close (you may also press the open/close button on the player, or gently press the front of the tray) to close the tray with or without a new disc.


**Note:** you may unload the disc at any time by pressing the open/close button. Unloading a CD-I disc while the CD-I program is running, unless asked to do so by the program, will terminate the CD-I program abruptly. "Bookmarks" or intermediate results, if used by the CD-I program, might not be updated to the latest situation.

**PLAYING A CD-I DISC**

**Note:** This procedure is equal for CD-I BRIDGE discs, CD-I READY discs and PHOTO-CDs.

After loading the disc, the CD-I start-up screen appears on the TV.

CD-I START-UP SCREEN

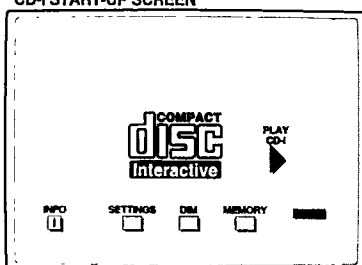


To start the CD-I program, select the play icon on the screen (you may also press the play button on the player or remote control). Using a play button will also automatically close the tray when open.

The opening screen of the CD-I program now appears on the TV. From this point, all interaction is between you and the program.

To stop at any time, select the stop or exit function provided by the CD-I program.

**PLAYING A CD-AUDIO DISC**

**note:** this procedure can also be used for audio sections on 5 inch (12 cm) laser discs.

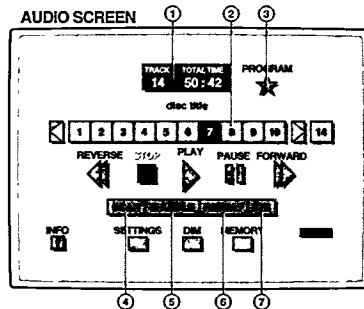

After loading the disc, the CD-Audio screen appears on the TV.

- Track/time window:** after loading, and in stop mode, this shows the total number of tracks and the total playing time. In play and pause modes, the window shows the track number and either the elapsed or the remaining track playing time. To change between elapsed and remaining time, "point-and-click" at the time shown in the window.
- Play track bar:** shows up to 10 track numbers and the total number of tracks. You can "point-and-click" to select any track. For discs with more than 10 tracks, the forward > and reverse < scroll arrows at the right and left of the track bar are used to move through the track list. The total number of tracks is shown in the box to the right of the bar; you can "point-and-click" on it to display the total playing time in the track/time window.
- Program star:** allows you to program a list of special tracks called a favorite track selection. When you select this star, the cursor arrow changes to a star, the FTS track bar appears above the play track bar and the save diamond appears beside the program star.
- Scan:** allows you to listen to the beginning of every track listed in the play track bar. You can set the scan time to 5, 10 or 20 seconds in the settings screen.
- Shuffle:** allows you to play the tracks in the play track bar in a random order.
- Repeat:** allows you to repeat either a track or the entire disc. You can change the repeat mode in the settings screen.
- FTS:** allows you to play favorite track selections. This icon only appears if a favorite track selection has been created for the disc that is loaded in the player.

All the disc play control functions are shown on the screen, and can be selected as desired by "point-and-click" with your remote control. The operation of the functions is briefly explained in the following table.

**Note:** if auto shuffle or auto FTS has been selected on the settings screen, this function will be activated automatically.

**USING THE CD-AUDIO SCREEN**

**Note:** When play starts, adjust the sound level as required.

OPERATION	SELECT
<b>start play</b>	<b>play</b> starts at the beginning of track 1, or any other preselected track number. If a track is already playing, it is re-started.
<b>Select a track</b>	<b>track number</b> if the disc has more than 10 tracks, use the left < and right > scroll arrows to move through the track numbers as required.
<b>Pause</b>	<b>pause</b> use to interrupt play.
<b>Exit pause</b>	<b>pause or play</b> play restarts at exactly the same point as pause was selected.
<b>Forward search</b>	<b>forward</b> searches forward through disc, first slowly, then fast.
<b>Reverse search</b>	<b>reverse</b> searches backwards through disc, first slowly, then fast.
<b>Stop play</b>	<b>stop</b> if play is re-started, it begins at the first track.
<b>Scan the disc</b>	<b>scan</b> plays the beginning of each track on the disc in turn.
<b>Exit scan</b>	<b>scan</b> normal play starts from this point.
<b>Shuffle play</b>	<b>shuffle</b> shuffle sequence appears in track bar.
<b>Exit shuffle</b>	<b>shuffle</b> normal play starts from this point.
<b>Repeat</b>	<b>repeat</b> repeats the entire disc (or FTS program), or the track being played, as selected on the settings screen.
<b>Play FTS</b>	<b>FTS</b> only available when an FTS program has already been created for the disc in the player.
<b>Exit FTS</b>	<b>FTS</b> normal play starts from this point.
<b>Program FTS</b>	<b>program</b> point to tracks as required star on the play track bar, and in each case click on any action button two times to record the track in the FTS track bar. To insert a track in the FTS track bar, click once where you want it to go, then click two times on the desired number in the play track bar. To cancel an unwanted track, point to it in the FTS track bar and click on any action button two times. To can-

## DISC PLAY

cel the entire FTS program, point to the first track in the FTS track bar and click on any action button repeatedly until all the tracks disappear.

### Store FTS


save diamond the keyboard screen replaces the CD-Audio screen. See "creating FTS titles" below.

### CREATING FTS TITLES

After creating a favorite track selection for a disc, you can compose a title of up to 30 characters for the selection using the keyboard screen. The title then appears on the CD-Audio screen whenever the disc is loaded.

At the CD-Audio screen, point-and-click on the program star, then point-and-click on the save diamond. The CD-Audio screen will change to the keyboard screen.

#### KEYBOARD SCREEN

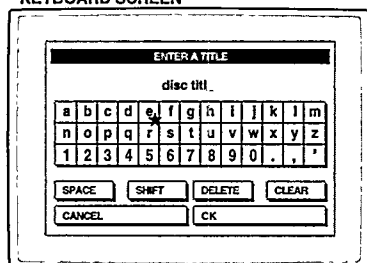

Select each character of the title in turn, using shift to change between upper and lower case characters and space to separate words. Delete erases the last selected character. Clear erases the complete (or partially complete) title. Cancel returns to the CD-Audio screen without saving the title. OK saves the title and returns to the CD-Audio screen.

### PUSH-BUTTON CONTROL


For basic play control, or for playing discs through a stereo system without using the TV, you can use the buttons on the front panel or on the remote control. The play, pause and stop buttons operate in the same way as the corresponding on-screen functions. The (next) and (previous) buttons skip one track forward or backward respectively.

The functioning of these buttons will depend completely on the application when playing a CD-I program.

### CD GRAPHICS

(available on some player versions only)


When a CD-Audio disc with graphics is played, the CD Graphics screen appears automatically.

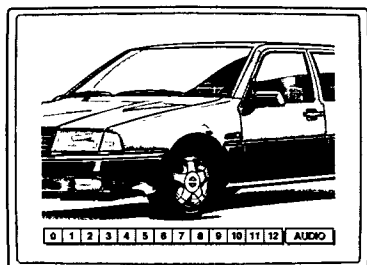

(Example)

To let the picture channel bar appear/ disappear click on the action button anywhere outside an indicated selection item.

In general the channel numbers 0 and 1 should always be on. Depending on the disc the other channel numbers might give you other information such as the lyrics in a different language. Refer to the instructions that come with the disc for their functions.

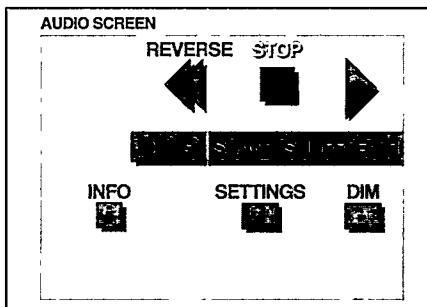

To play audio only, click on the audio icon. The CD-Audio screen then appears with an additional icon for CD Graphics.

Point and click on this icon to obtain the CD Graphics screen again.

**Note:** Do not confuse channel numbers with the track numbers on the CD-Audio screen

### CHANGING OVER TO TV

Select the desired channel or input of your TV using the controls of your TV set. When the player is switched on, its antenna signal is fed through to the TV and depending on the TV/TV connection, TV reception might be interrupted automatically.

To change over to TV reception at any time in such case, press the TV/CDI button on the remote control (available with some player versions only). To return to CD-I play, press the TV/CDI button again.

### SOUND LEVEL

When playing any disc adjust the sound level as required, preferably on the TV or HiFi amplifier. The volume up/down buttons on the remote control may also be used, but for each disc these controls always start at maximum and can only be used to set a lower level. A suitable maximum must therefore first be set on the TV or HiFi amplifier.

**Note:** Connecting a headphone does not mute the loudspeaker sound. This must be done manually, on the TV or HiFi system, if required.

### SWITCHING OFF

- Press the on/off button on the player, and check that the player display goes off.
- Switch off the TV (and HiFi system if used).

## BEFORE REQUESTING SERVICE

If it appears that the CD-I player is faulty, first consult this check list. It may be that something simple has been overlooked. Under no circumstances attempt to repair the system yourself; this will invalidate the warranty.

### No power...

- check that the power on/off button is set to on.
- check that both plugs on the power cord are properly connected.
- check that there is power at the AC outlet by plugging in another appliance.

### No picture...

- check that the TV is switched on.
- select the same channel or input on the TV as that of the player or check the video connection.

### Distorted picture...

- check the disc for fingerprints and clean with a soft cloth, wiping from centre to edge.

### No open icon on TV screen

- switch the player off, then switch on again while holding the stop button pressed.

### No start-up screen does not change...

- check the disc label is upwards
- clean the disc.
- check if the disc is defective by trying another disc.

### No sound...

- check if headphones work.
- check audio connections.
- if using a HiFi amplifier, try another sound source.

### Distorted sound from HiFi amplifier

- check that audio connections are not made to amplifier Phono input.

### No return to start-up screen when disc is removed...

- reset by switching the player off, then on again.
- check if the CD-I program requires another disc to be loaded.

### The player can't be remote controlled...

- aim the remote control directly at the sensor on the player.
- avoid all obstacles which may interfere with the signal path.
- disconnect the device connected to Input2 (rear).
- inspect or replace the batteries.



**UK GUARANTEE AND SERVICE FOR UNITED KINGDOM**

Philips sell this product subject to the understanding that if any defect in manufacture or material shall appear in it within 12 months from the date of consumer sale, the dealer from whom the product was purchased will arrange for such defect to be rectified without charge, provided:

1. Reasonable evidence is supplied that the product was purchased within 12 months prior to the date of claim.
2. The defect is not due to use of the product for other than domestic purposes, or on an incorrect voltage, or contrary to the Company's operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inexpert repair.

Products sent for service should be adequately packed as no liability can be accepted for damage or loss in transit, and name and address must be enclosed.

Facts about free service: When service is required, apply to the dealer from whom the product was purchased. Should any difficulty be experienced in obtaining Service, e.g. in the event of the dealer having ceased to trade, you are advised to contact Philips Consumer Electronics. These statements do not affect the statutory rights of a consumer.

If you have any questions which your dealer cannot answer, please write to:

**Philips Consumer Relations**  
P.O. Box 298  
420 London Road, CROYDON CR9 3QR  
Phone: 081-665 6350 Consumer help desk

ce après-vente, doivent vous être précisées lors de l'achat par le vendeur qui, de plus, vous conseillera en cas de panne ou de défaillance.

A cet effet, il vous est demandé de conserver soigneusement votre facture et/ou le présent document dûment rempli et signé et/ou le contrat de garantie qui vous aura été remis conformément au décret N 87-1048 du 22 décembre 1987.

Pour sa part, PHILIPS, soucieux de l'intérêt des consommateurs, apporte sa contribution aux efforts des points de vente, que ce soit en matière de garantie ou de service après-vente:

- Matériellement, par la formation, l'assistance technique, la fourniture de pièces détachées.
- Financièrement, selon des modalités précises définies entre PHILIPS et les points de vente.

**RAPPEL:** Vous bénéficiez en tout état de cause des dispositions des articles 1641 et suivants de code civil relatifs à la garantie légale.

Aucune garantie ne peut être mise en oeuvre si la détérioration résulte d'une cause étrangère à l'appareil ou du non respect des prescriptions d'utilisation.

**SERVICE CONSOMMATEURS PHILIPS:**  
B.P. 40-77423 MARNE LA VALLEE CEDEX 2  
(16-1) 64805454 - Minitel 36 15 code: PHILIPS

**SNC PHILIPS ELECTRONIQUE DOMESTIQUE**  
RCS NANTERRE 8 333 760 833

bricage- en/of materiaal-fouten optreden.

Wie voert de garantie uit ?

De zorg voor de uitvoering van de garantie berust bij de handelaar die u het apparaat verkocht heeft. De handelaar kan daarbij eventueel een beroep doen op een der Philips Service vestigingen.

U kunt alleen een beroep doen op de bovenomschreven garantie tegen overlegging van de aankoopbon (factuur, kassabon of kwitantie). Uit de aankoopbon dienen duidelijk de aankoopdatum en de naam van de handelaar te blijken.

Hoe te handelen bij een storing ?

Om onnodige kosten te voorkomen, raden wij u aan bij storingen eerst nauwkeurig de gebruiksaanwijzing daarin geen uitsluiting biedt, kunt u uw handelaar raadplegen en/of hem het apparaat ter reparatie aanbieden.

...en bij problemen ?

Bij problemen omtrent de garantie-uitvoering kunt u zich in verbinding stellen met

**Philips Nederland B.V.,**  
Afdeling Consumentenbelangen,  
Antwoordnummer 500 - 5600 VB Eindhoven  
(postzegel niet nodig),  
of telefoon 040-781178

**I CONDIZIONI DI GARANZIA**

1. L'apparecchio è garantito per un periodo di 12 mesi dalla data di acquisto comprovata da un documento rilasciato dal rivenditore autorizzato che attesti il nominativo del rivenditore e la data in cui è stata effettuata la vendita.
2. La garanzia sarà prestata con la sostituzione o riparazione delle parti che risultino difettose.
3. Non sono coperte dalla garanzia tutte le parti che dovessero risultare difettose a causa di negligenza o trascuratezza nell'uso (mancata osservanza delle istruzioni per il funzionamento dell'apparecchio), di errata installazione o manutenzione o manutenzioni operate da personale non autorizzato, di danni da trasporto, ovvero circostanze che, comunque, non possono riferirsi a difetti di funzionamento dell'apparecchio. Sono altresì esclusi dalle prestazioni in garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.
4. La garanzia è inoltre esclusa in tutti i casi di uso improprio dell'apparecchio.
5. La Casa costruttrice declina ogni responsabilità per eventuali danni che possono, direttamente o indirettamente, derivare a persone, cose ed animali domestici in conseguenza della mancata osservanza di tutte le precauzioni indicate all'apposito libretto di istruzioni e concernenti specialmente le avvertenze in tema di installazione, uso e manutenzione dell'apparecchio.
6. Per gli apparecchi per i quali è richiesto l'intervento a domicilio, l'utente è tenuto a corrispondere il "diritto fisso per le spese di trasferimento a domicilio", in vigore alla data dell'intervento. Qualora l'apparecchio venisse riparato presso uno dei Centri del Servizio di Assistenza Tecnica indicati dalla Casa costruttrice, le spese ed i rischi di trasporto relativi saranno a carico dell'utente.

**F GARANTIE ET SERVICE APRES-VENTE EN FRANCE**

Cet appareil PHILIPS a été fabriqué avec le souci de donner vous entière satisfaction. Sa garantie contractuelle est de la responsabilité du point de vente.

Cette garantie qui peut varier tant en durée qu'en contenu, ainsi que les modalités de servi-

**B**

Philips België verkoopt dit apparaat op voorwaarde dat de verdeler waar het apparaat werd aangekocht, dit toestel gratis herstelt indien er een fabricagefout of materiaalgebrek zou optreden, binnen de 12 maanden.

Indien u vragen hebt waarop Uw verdeler niet kan antwoorden, gelieve onze Dienst Na Verkoop te contacteren:

**Philips Evere**  
Léon Grosjeanlaan 2  
1140 Brussel  
Tel: 02/738.02.11

Philips Belgique vend cet appareil à condition que le distributeur où l'appareil a été acheté, répare gratuitement celui-ci si un vice de fabrication ou de matière apparaissait, endéans les 12 mois.

Si vous avez des questions auxquelles votre revendeur ne peut pas répondre, prière de contacter notre Service Après Vente:

**Philips Evere**  
Avenue Léon Grosjean, 2  
1140 Bruxelles  
Tél : 02/738.02.11

**P**

A Philips Portuguesa, S.A. - Divisão de Tecnologias de Informação comercializa este equipamento na condição de que, se for detectado qualquer defeito de material ou de fabrico no prazo de 90 (noventa) dias a contar da data da sua aquisição, o Distribuidor a quem o mesmo foi adquirido procederá à sua reparação sem quaisquer encargos para o cliente. Para qualquer esclarecimento, favor contactar:

**Philips - Serviços Técnicos**  
Estrada de Outurela  
Carnaxide  
2795 Linda-a-Velha  
Portugal  
Telephone: 417 00 71

**NL WAT WORDT GEGARANDEERD?**

Philips Nederland B.V. garandeert dat dit apparaat kosteloos wordt hersteld indien - bij normaal particulier gebruik volgens de gebruiksaanwijzing - binnen 12 maanden na aankoopdatum fa-

**E PHILIPS IBERICA, S.A.E.**

Garantiza este aparato durante 6 meses, a partir de la fecha de adquisición, de la forma siguiente:

1. CUBRIENDO cualquier defecto de fabricación o vicio de origen, así como la TOTALIDAD DE SUS COMPONENTES, incluyendo la MANO DE OBRA necesaria para el reemplazo de las piezas defectuosas, por nuestros talleres autorizados.
2. Esta garantía NO CUBRIRÁ la avería, si es consecuencia de incorrecta instalación del aparato, manifiesto mal trato o uso inadecuado del mismo. La calificación de las averías corresponde únicamente a los servicios técnicos de los talleres autorizados Philips.
3. Las reparaciones que pudieran producirse durante el periodo de vigencia de la presente garantía se efectuarán, bien en el domicilio del usuario, bien en los talleres autorizados Philips, a libre elección y criterio de esta última entidad.
4. Si la intervención se efectuara en el domicilio del usuario transcurrido un mes desde la fecha de adquisición del aparato, todos los gastos de desplazamiento del personal técnico para proceder al examen y/o reparación del aparato, correrán por cuenta del usuario de acuerdo con las tarifas establecidas para este concepto.
5. En todo caso, el titular de la garantía tiene los derechos mínimos reconocidos por la Ley.
6. En todas las reparaciones se deberán acompañar al aparato la FACTURA DE COMPRA con la indicación exacta de la FECHA DE VENTA del aparato.

**OTHER COUNTRIES**

Philips sell this product subject to the understanding that if any defect in manufacture or material shall appear in it within 90 days from the date of sale, the supplier from whom the product was purchased will arrange for such defect to be rectified without charge. You may have other rights, which vary from country to country. Please consult your supplier.




# SPECIFICATIONS

<b>System</b>	CD-Interactive
<b>Usable discs</b>	CD-I CD-DA PHOTO-CD CD-I READY CD-I BRIDGE CD+GRAPHICS
<b>Power requirement</b>	220-240 VAC/50 Hz
<b>Power consumption</b>	35 W
<b>Operating temperature</b>	41°F(5°C) to 95°F(35°C)
<b>Relative humidity</b>	5% to 95% (no condensation)
<b>Weight</b>	15.4 lbs (7 kg)
<b>Dimensions (w x h x d)</b>	
16.55" (420 mm) x 3.55" (90 mm) x 15.74" (400 mm)	

### Input

remote in	2 V <sub>pp</sub> at 2.2 kOhm cinch socket
input	(2 ports) 8-pin mini-DIN

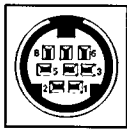

pin	signal	I/O
1	nc	
2	rxd	I
3	txd	O
4	dtr	O
5	ground	
6	cts	I
7	rts	O
8	+5V (200 mA max)	

Note: Pointing device speed of 9600 baud is supported.


### Output

 antenna	75 Ohms cable input 75 Ohms cable output CH 36 (32...40 adjustable)
video	1 V <sub>pp</sub> (75 Ohm load, sync neg) RCA pin jack
S-video	y-output 1 V <sub>pp</sub> (75 Ohms) c-output 286 mV <sub>pp</sub> (75 Ohms) S-video 4-pin mini-din



pin	signal
1	ground y
2	ground c
3	y
4	c

### AV/Euroconnector



pin	signal
1	audio R
2	nc
3	audio L
4	audio ground
5	blue ground
6	nc
7	blue
8	slow switching (0=TV 1=AV/Euroconnector)
9	green ground
10	nc
11	green
12	nc
13	red ground
14	nc
15	red
16	fast switching (RGB/CVBS)
17	CVBS ground
18	fast switching (ground)
19	CVBS/RGB sync
20	nc
21	shield

Headphone input impedance 8 Ohm to 2 kOhm output power 30 mW at 1 kHz, 32 Ohm stereo socket 6.3 mm


Audio 2 V<sub>rms</sub>  
2 channel individual RCA pin cinch sockets

Designs and specifications are subject to change without notice.


# ACCESSORIES
 
## SUPPLIED ACCESSORIES


These accessories are provided to help you use or set-up your CD-I Player.




AC Cord

 


Two Batteries

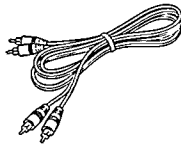


Audio L-R Cable

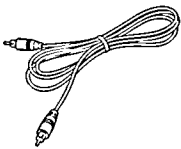

Video (CVBS) Cable

 

"Thumbstick" Remote Control Handset

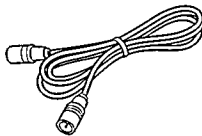


RF coaxial cable

## OPTIONAL ACCESSORIES

 Maximize your pleasure with state-of-the-art accessories designed specifically for your CD-I Player.


The optional accessories shown here may be purchased from your supplier.



CD-I Mouse  
22ER9011



 Roller Controller  
22ER9012



CD-I Trackball  
22ER9013



CD-I Joystick  
22ER9014

type no. of product: \_\_\_\_\_  
 tipo no. del producto: \_\_\_\_\_  
**CD-I 205**

Date of purchase • Date d'achat • Kaufdatum • Koopdatum • Fecha de compra •  
 Data da compra • Data di acquisto • Købsdato • Kjøpedato • Inköpsdato • Ostapäivä •  
 Ημερομηνία αγοράς

day \_\_\_\_\_ month \_\_\_\_\_ year 19 \_\_\_\_\_

Dealer's name, address and signature • Nom, adresse et signature du revendeur • Name, Anschrift und Unterschrift des Händlers • Naam, adres en handtekening van de handelaar • Nombre, dirección y firma del distribuidor • Nome, indirizzo e firma del fornitore • Nome, morada e assinatura do vendedor • Forhandlerens navn, adresse og underskrift • Återförsäljarens namn, adress och namnteckning • Myyjän nimi, osoite ja allekirjoitus • Όνομα/Επώνυμο Αντιπροσώπου