



Designed with gaming in mind, we focused on developing the most powerful tablet in the world that runs all PC games and applications. It's not just a tablet, but a PC and a console. The Razer Edge is the world's first tablet designed for PC gamers.

The latest Intel® Core™ i5/i7 processor and NVIDIA® GeForce® graphics are powering all of your favorite PC games and applications on a high definition multi-touch 10-inch display, in an ultra-portable form factor.

The Razer Edge elevates the gaming experience to all tablets out there. It's a Tablet, it's a PC, it's a Console. Pair the Razer Edge with the Razer Keyboard Dock to play any PC game out of the box, with the Gamepad Controller for mobile console gaming, or connect multiple gamepads to the Docking Station for a mobile or home console gaming experience.

TABLE OF CONTENTS

PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT	4
DEVICE LAYOUT.....	5
USING YOUR GAMEPAD CONTROLLER	7
SAFETY AND MAINTENANCE	11
LEGALESE	12

 
1. PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT

PACKAGE CONTENTS

- Gamepad Controller for Razer Edge
- Quick Start Guide

REGISTRATION

- Please visit www.razerzone.com/registration for online product registration.

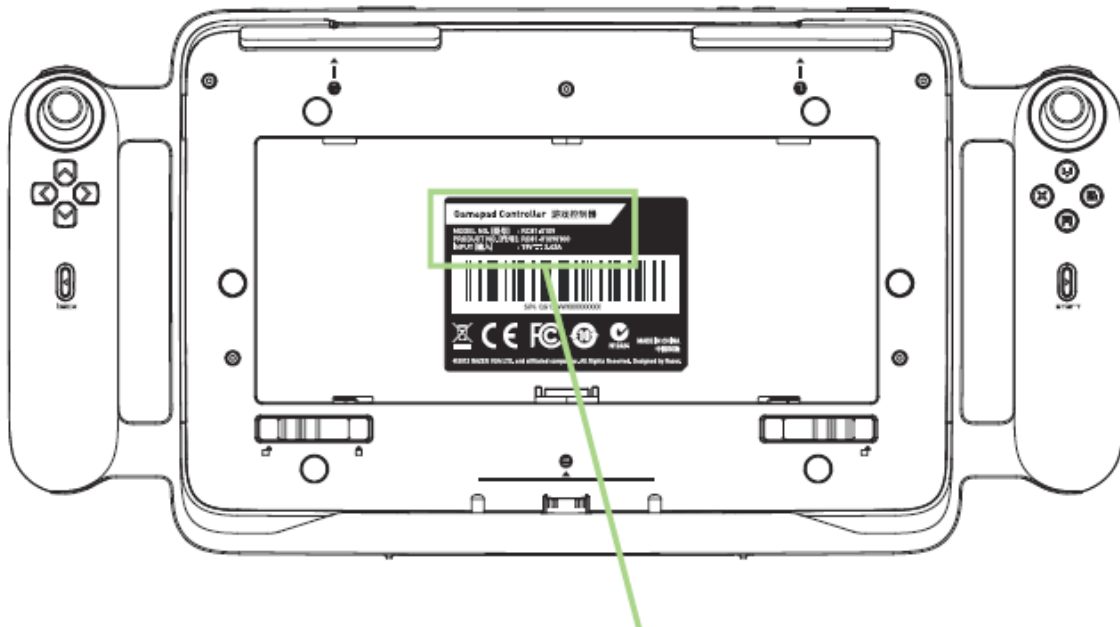


Your product's serial number can be found here.

TECHNICAL SUPPORT


What you'll get:

- 1 year limited manufacturer's warranty.
- Free online technical support at www.razersupport.com.

 
2. DEVICE LAYOUT

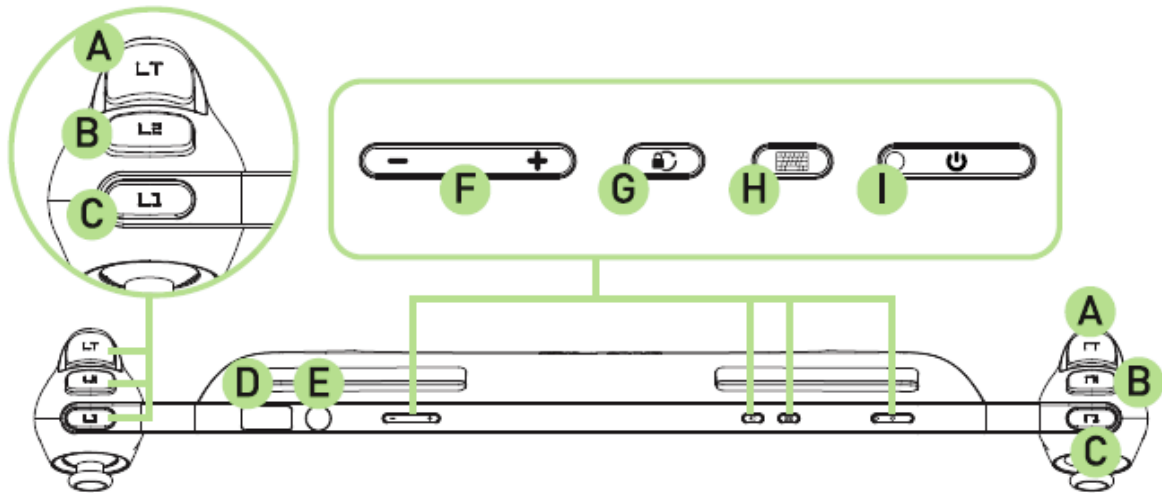

 - A. Trigger Buttons (LT / RT)
- B. Bumper Buttons (LB / RB)
- C. Guide Buttons (M1 / M2)
- D. USB Slot
- E. Earphone + Microphone Slot
- F. Audio Volume Control Buttons
- G. Auto Rotate Button
- H. Virtual Keyboard Button
- I. Power Button

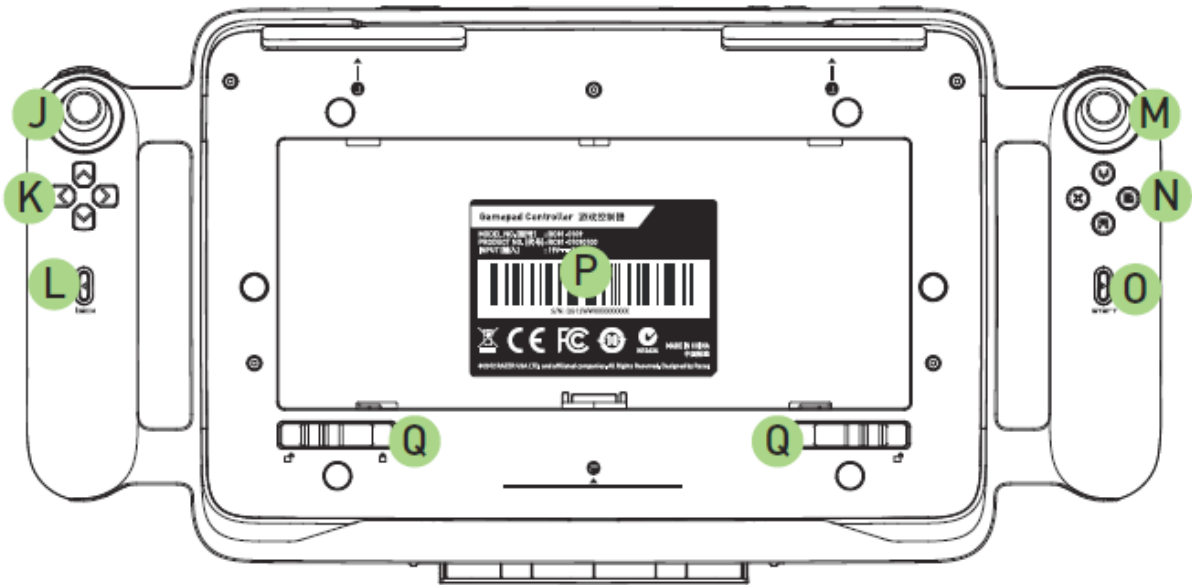

 - J. Left Analog Stick
- K. Directional Pad
- L. Back Button
- M. Right Analog Stick
- N. Action Buttons
- O. Start Button
- P. Battery Compartment Door
- Q. Battery Compartment Locks

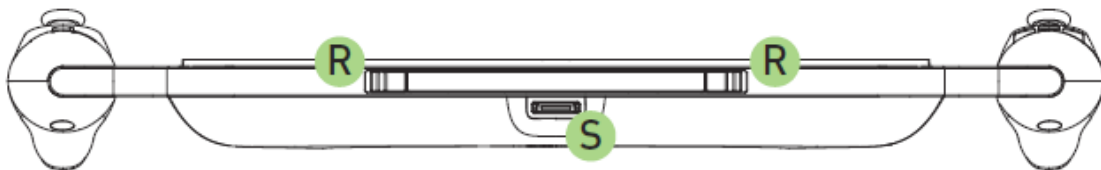


- R. Tablet Latches
- S. Integrated Data / Power Port


3. USING YOUR GAMEPAD CONTROLLER

ATTACHING YOUR RAZER EDGE

 
1. Unlock the Tablet Latches.

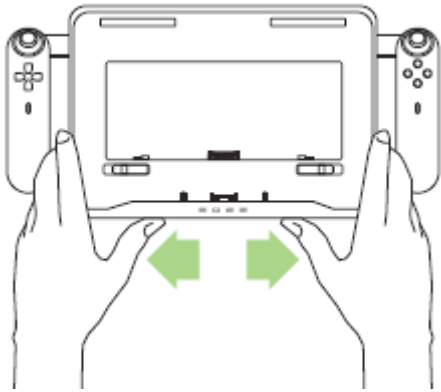

 
2. Ensure the clasp is fully released.

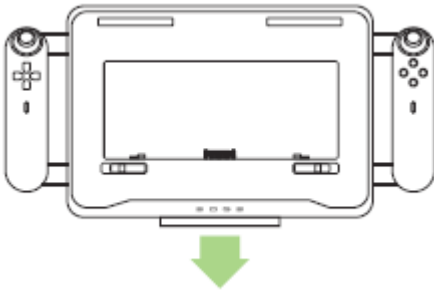

 3. Carefully insert your Razer Edge into the cradle.

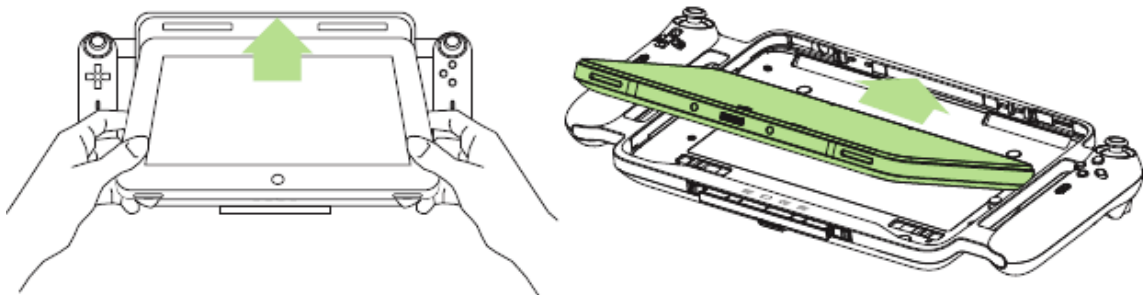

 4. Press down on your Razer Edge.

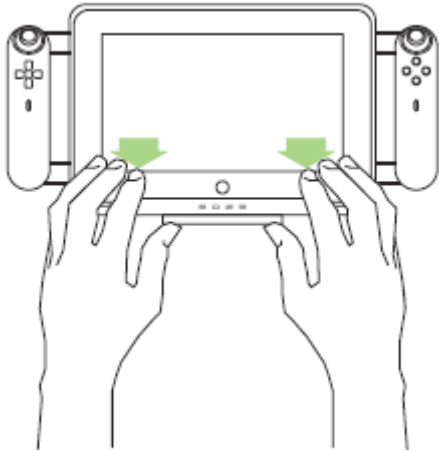


5. Push the clasp to secure your Razer Edge.




REMOVING YOUR RAZER EDGE

 
1. Unlock the Tablet Latches.

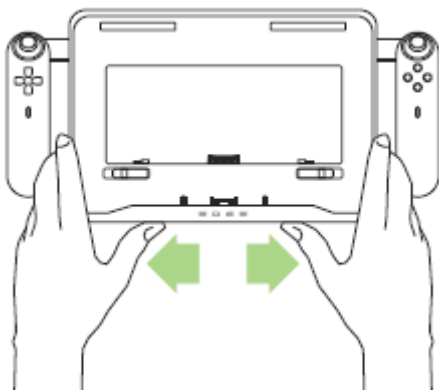

 
2. Ensure the clasp is fully released.

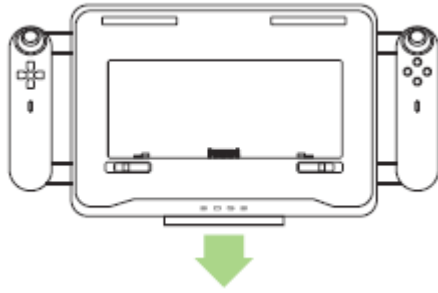

 3. Carefully lift your Razer Edge.

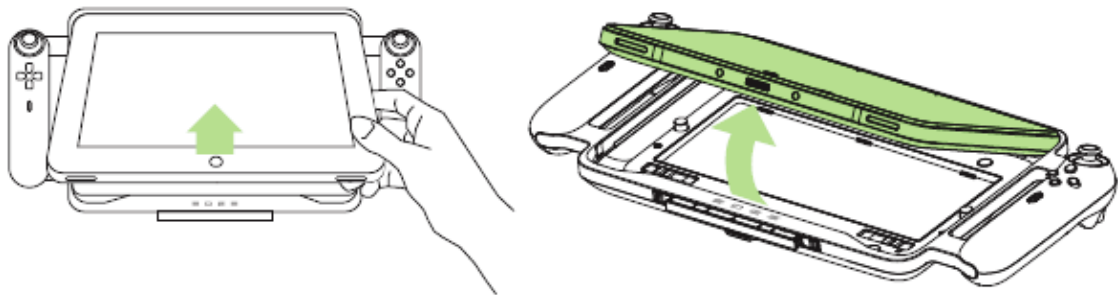


 4. Remove your Razer Edge.


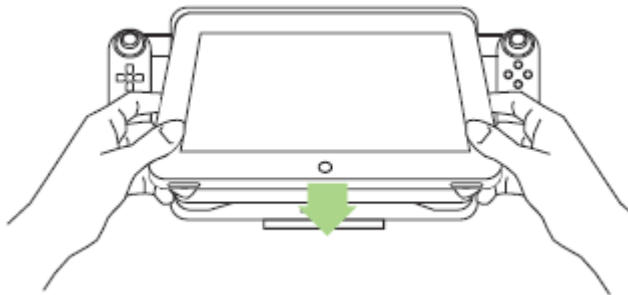


INSTALLING THE EXTENDED BATTERY PACK


 
1. Unlock the 2 battery latches.

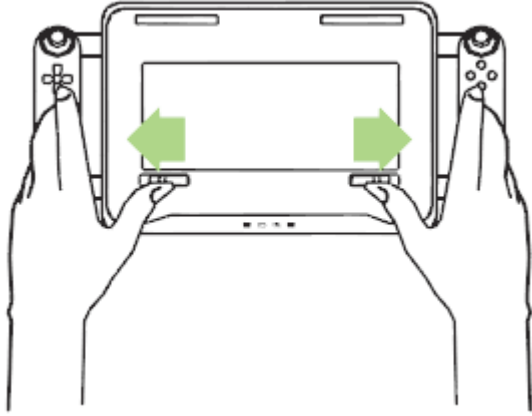

  2. Remove the battery compartment door.

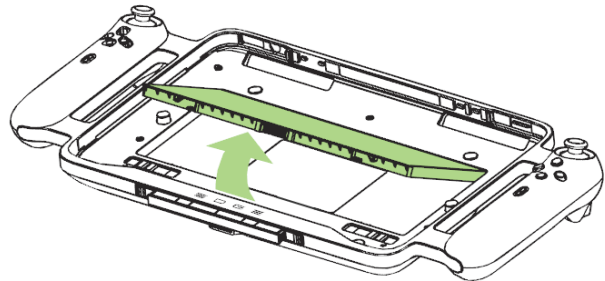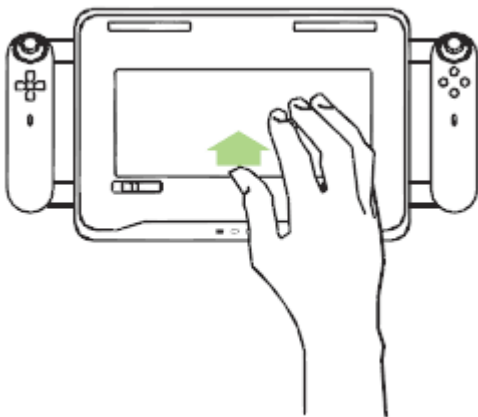

  3. Insert the extended battery pack.

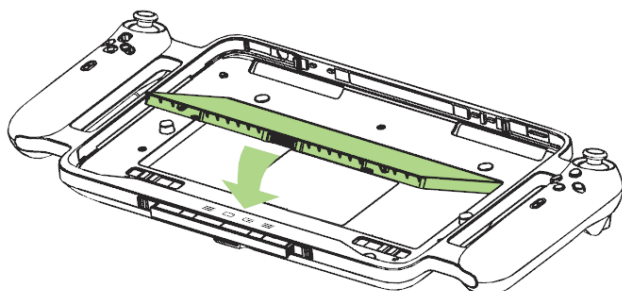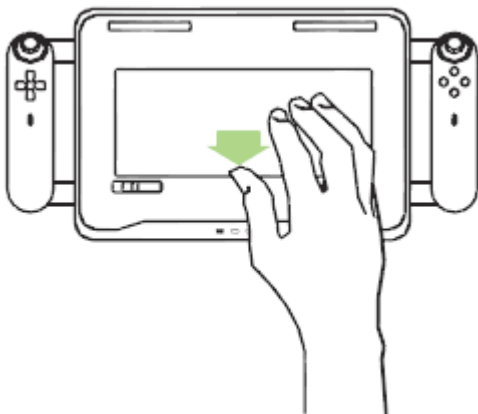

4. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Gamepad Controller, we suggest that you adopt the following guidelines:

1. Should you have trouble operating the tablet properly and troubleshooting does not work, contact the Razer hotline or go to www.razersupport.com for support. Do not attempt to service or fix the device yourself at any time.
2. Do not take apart the device (doing so will void your warranty) and do not operate it under abnormal current loads.
3. Keep your device away from liquid, humidity or moisture. Operate your device only within the specified temperature range of 0°C (32°F) to 35°C (95°F). Should you operate it in a temperature that is beyond this range, unplug and switch off the device in order to let the temperature stabilize within the optimal temperature range.

MAINTENANCE AND USE

The Gamepad Controller requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton swab with a bit of warm water to prevent dirt build-up. Do not use soap or harsh cleaning agents.

5. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2012 Razer USA Ltd. Patent Pending. All Rights Reserved. Razer, the Razer Triple-Headed Snake logo, the Razer distressed word logo and other trademarks contained herein are trademarks or registered trademarks of Razer USA Ltd and/or its affiliated or associated companies, registered in the United States and/or other countries.

Razer USA Ltd (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Gamepad Controller For Razer Edge (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit www.razerzone.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

COSTS OF PROCUREMENT

For the avoidance of doubt, in no event will Razer be liable for any costs of procurement unless it has been advised of the possibility of such damages, and in no case shall Razer be liable for any costs of procurement liability exceeding the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.



Designed with gaming in mind, we focused on developing the most powerful tablet in the world that runs all PC games and applications. It's not just a tablet, but a PC and a console. The Razer Edge is the world's first tablet designed for PC gamers.

The latest Intel® Core™ i5/i7 processor and NVIDIA® GeForce® graphics are powering all of your favorite PC games and applications on a high definition multi-touch 10-inch display, in an ultra-portable form factor.

The Razer Edge elevates the gaming experience to all tablets out there. It's a Tablet, it's a PC, it's a Console. Pair the Razer Edge with the Razer Keyboard Dock to play any PC game out of the box, with the Gamepad Controller for mobile console gaming, or connect multiple gamepads to the Docking Station for a mobile or home console gaming experience.

TABLE OF CONTENTS

PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT	3
TECHNICAL SPECIFICATIONS.....	5
DEVICE LAYOUT	6
SETTING UP YOUR RAZER EDGE.....	7
SAFETY AND MAINTENANCE	20
IMPORTANT PRODUCT INFORMATION.....	21

 
PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT

PACKAGE CONTENTS

- Razer Edge Gaming Tablet
- Power Adapter
- AC Power Cord
- Micro-Fiber Cloth
- Quick Start Guide

REGISTRATION

- Please visit www.razerzone.com/registration for online product registration.

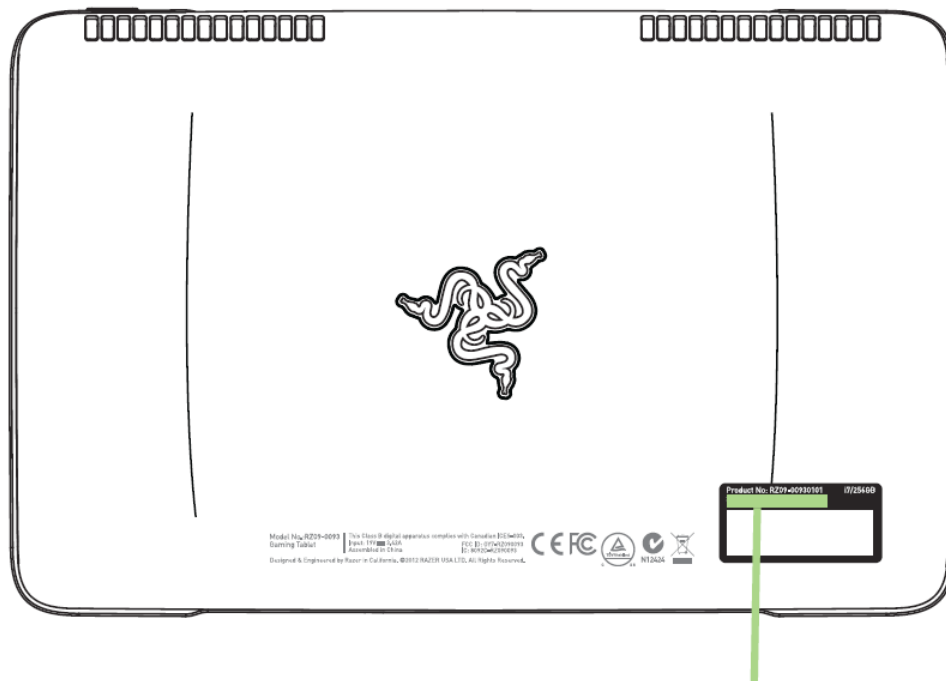

Your product's serial number can be found here.

TECHNICAL SUPPORT

What you'll get:

- 1 year limited manufacturer's warranty.
- Free online technical support at www.razersupport.com.
- For further assistance, you can call these numbers:

Country	Phone
Australia	1800-172937
US/Canada	1-855-872-5233
China	400 0808 769
Dubai	04 3883371
Malaysia	1800-88-72937
Singapore	800 6011456
International	1-760-448-8997


- For more information on the Razer Edge warranty, visit www.razerzone.com/warranty.

TECHNICAL SPECIFICATIONS

	RAZER EDGE	RAZER EDGE PRO	
Processor	Intel® Core™ i5-3317U with Hyper Threading 1.7GHz / 2.6GHz (Base/Turbo)	Intel® Core™ i7-3517U With Hyper Threading 1.9GHz / 3.0GHz (Base/Turbo)	
Memory	4GB DDR3 (2x2GB 1600MHz)	8GB DDR3 (2x4GB 1600MHz)	
Video	Intel® HD4000 (DX11) NVIDIA® GT 640M LE (1GB DDR3, Optimus™ Technology)	Intel® HD4000 (DX11) NVIDIA® GT 640M LE (2GB DDR3, Optimus™ Technology)	
Display	10.1" (IPS, 1366x768), multi-touch HD Display		
Operating System	Windows® 8		
Storage	64GB SSD (SATA-III)	128GB SSD (SATA-III)	256GB SSD (SATA-III)
Communication	Intel® WLAN (802.11b/g/n + Bluetooth® 4.0)		
Dimension	Width 10.9" (278.5mm) x Height 7" (178.85mm) x Depth 0.8" (20.44mm)		
Approx. Weight	955g / 2.1lbs		
Battery	Built-in 5600mAh / 41.44Wh rechargeable lithium-ion polymer battery		
Inputs / Outputs	40-pin dock connector port 3.5mm audio jack (4-pole, stereo out / mic in) Built-in stereo speakers Array microphones USB 3.0 x1 (green, SuperSpeed)		
Others	Dolby® Home Theater® v4 7.1 Codec support (via HDMI on Docking Station*) HD Webcam (front-facing, 2MP)		

**sold separately*

 
DEVICE LAYOUT

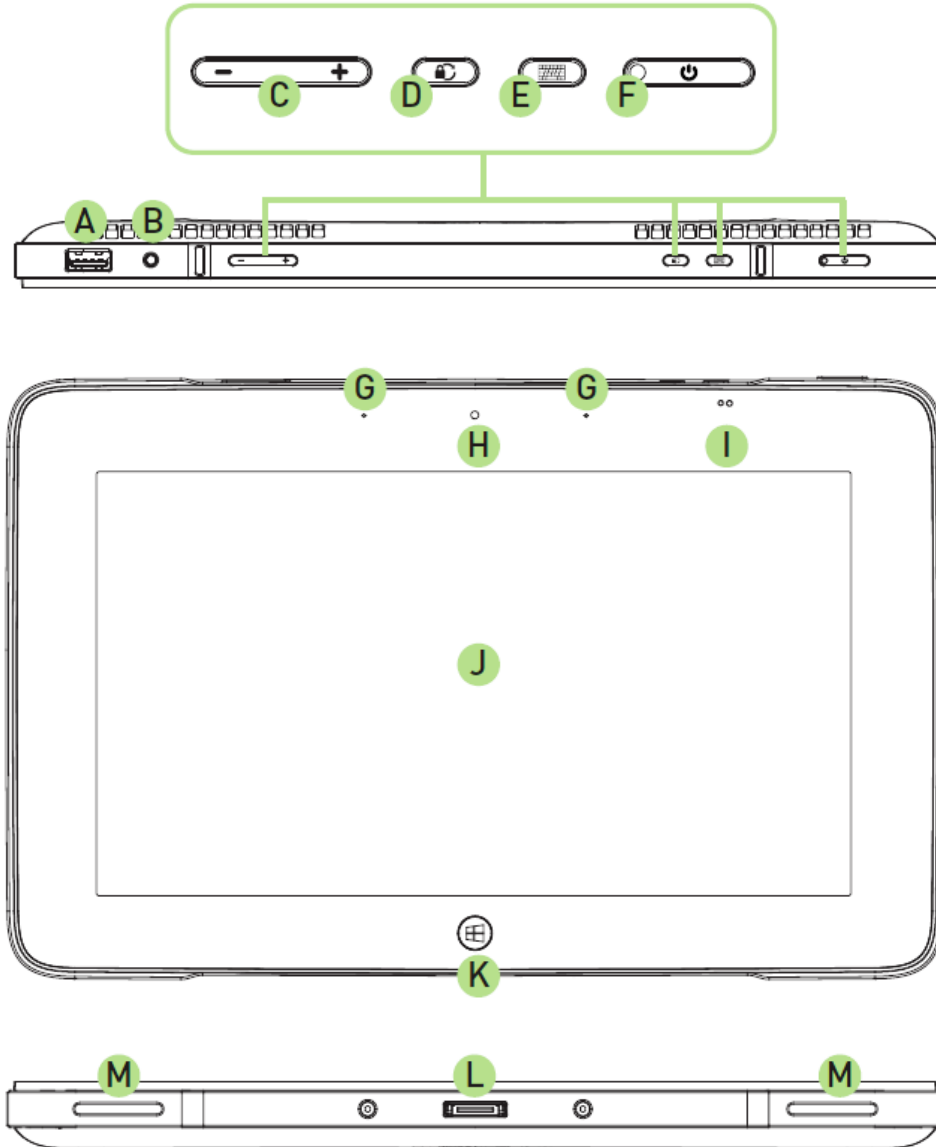


- A. USB 3.0 (SuperSpeed) Port
- B. 3.5mm Audio + Microphone Port
- C. Volume Control Buttons
- D. Rotation Lock Button
- E. Virtual Keyboard Button
- F. Power Button
- G. Array Microphones
- H. Built-in HD Webcam
- I. Ambient Light Sensor
- J. Multi-touch HD Display
- K. Windows Home Button
- L. Integrated Data / Power Port
- M. Built-in Stereo Speakers

SETTING UP YOUR RAZER EDGE

 1. Connect the power adapter from an outlet to your Razer Edge.

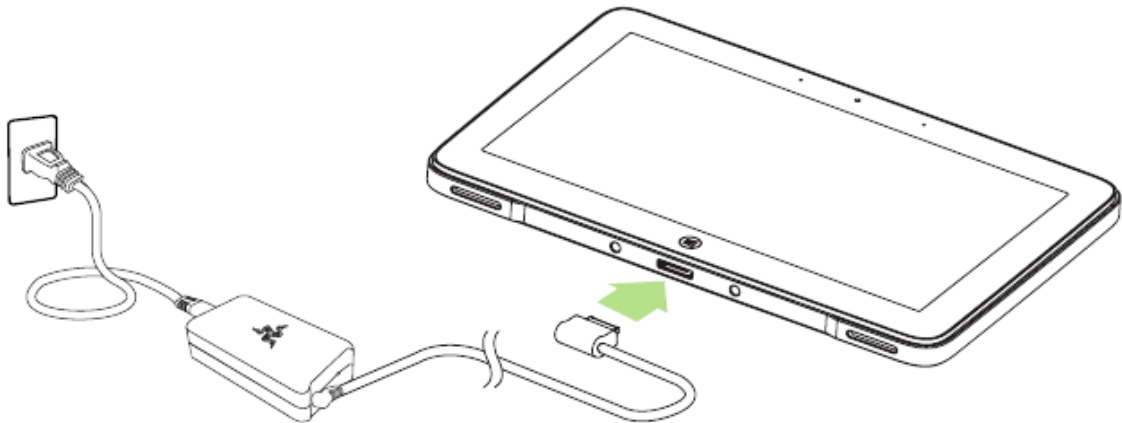

 2. Charge the battery to Full.

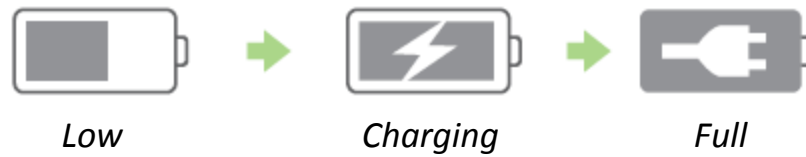


3. Press and hold the Power button until the Razer logo appears.



4. Configure the operating system by following the Windows 8 Setup Guide.


WINDOWS 8 SETUP GUIDE

 1. Select the language for your Operating System.
Choose from the list your preferred default language for Razer Edge.

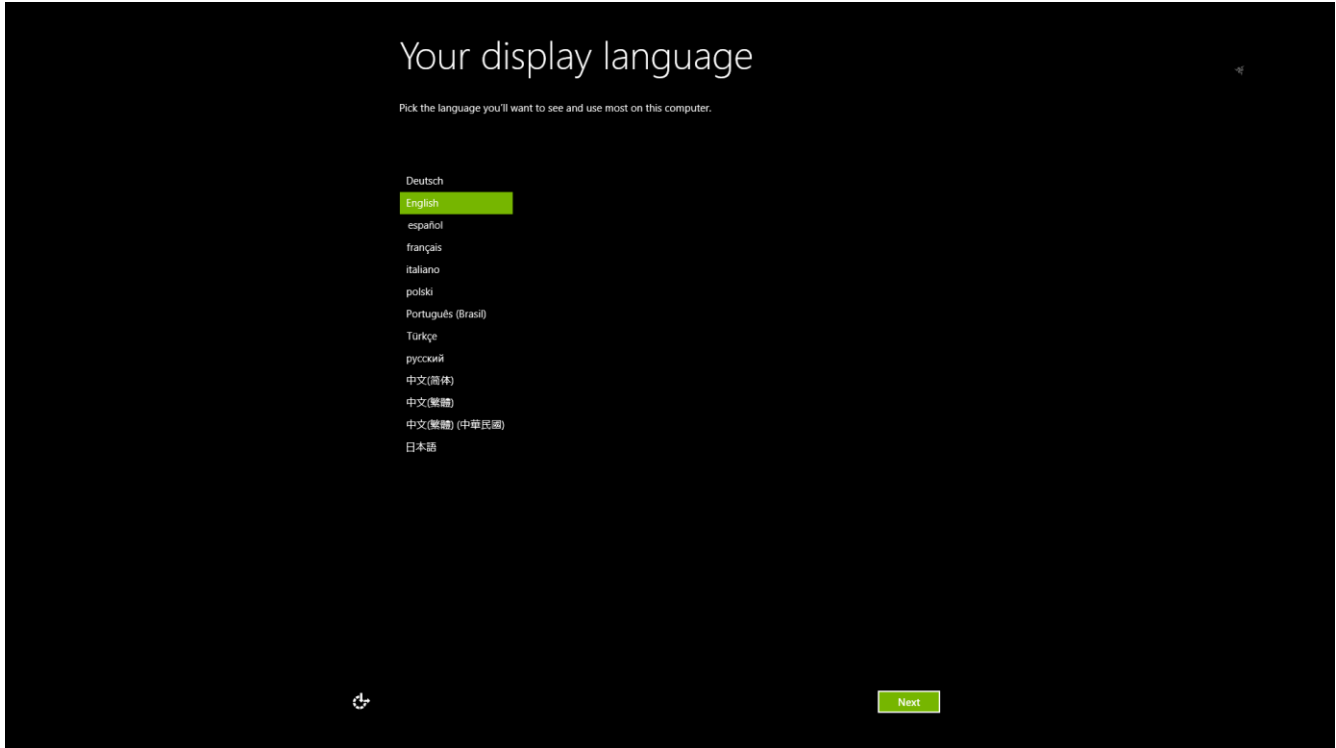


Tap **Next**.

 3. Enter your Windows product key in the given field.

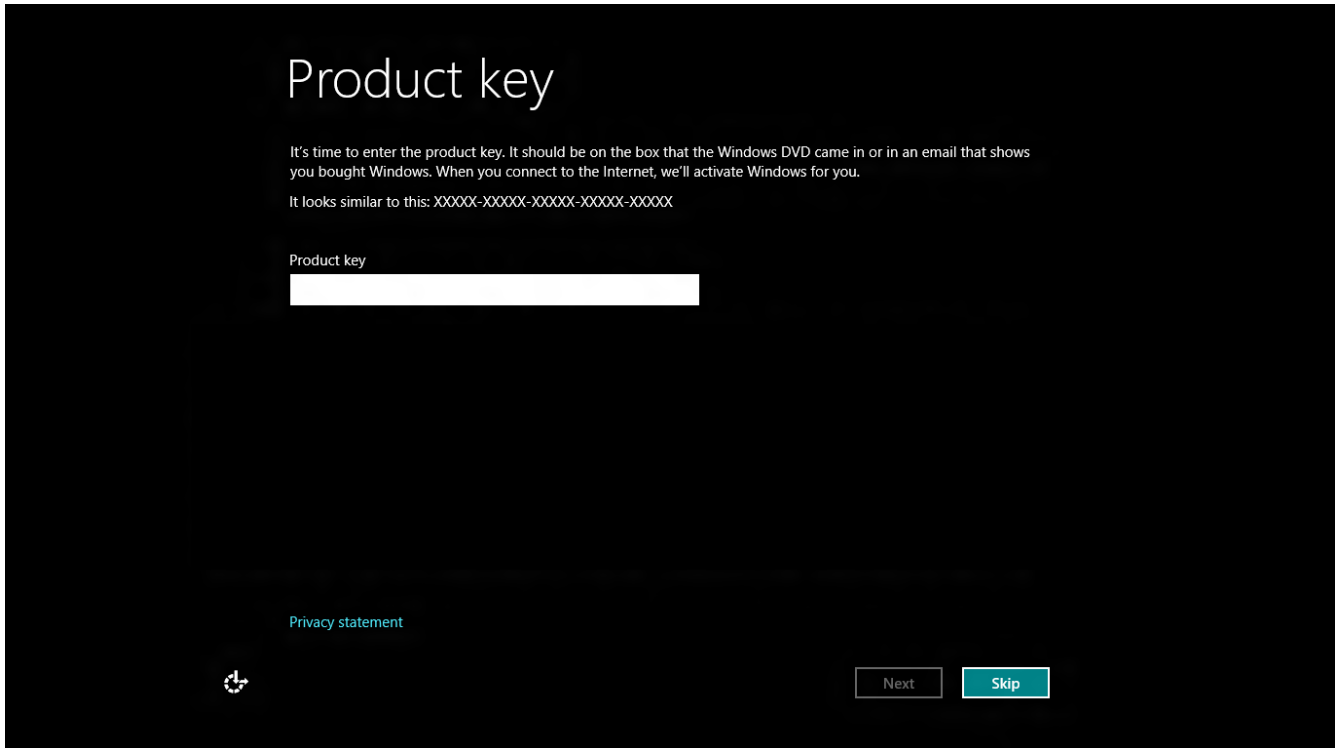

 
Refer to the Microsoft® label under your Razer Edge and key in the necessary information.

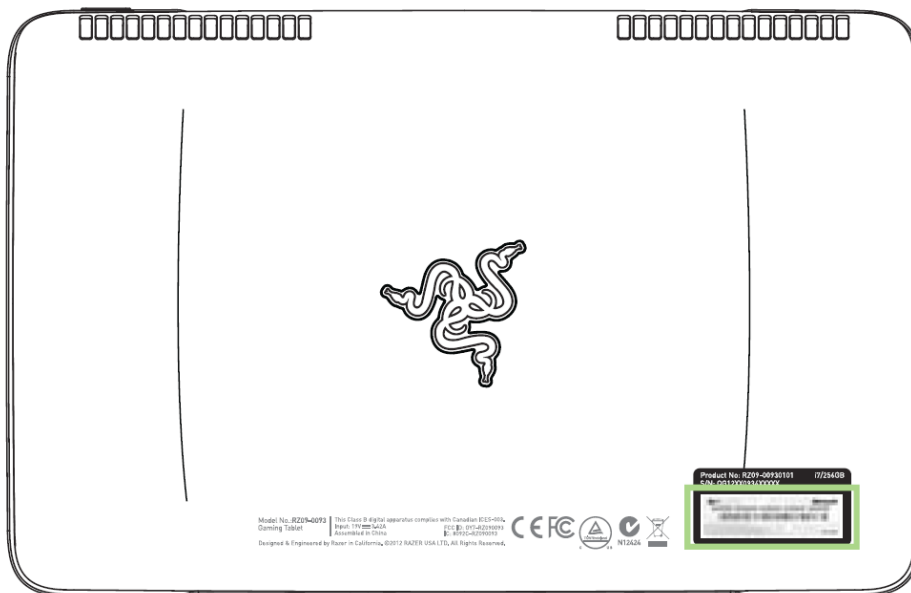

Tap **Next**.

4. Personalize your Windows® 8

 
Choose your preferred desktop theme and PC name.

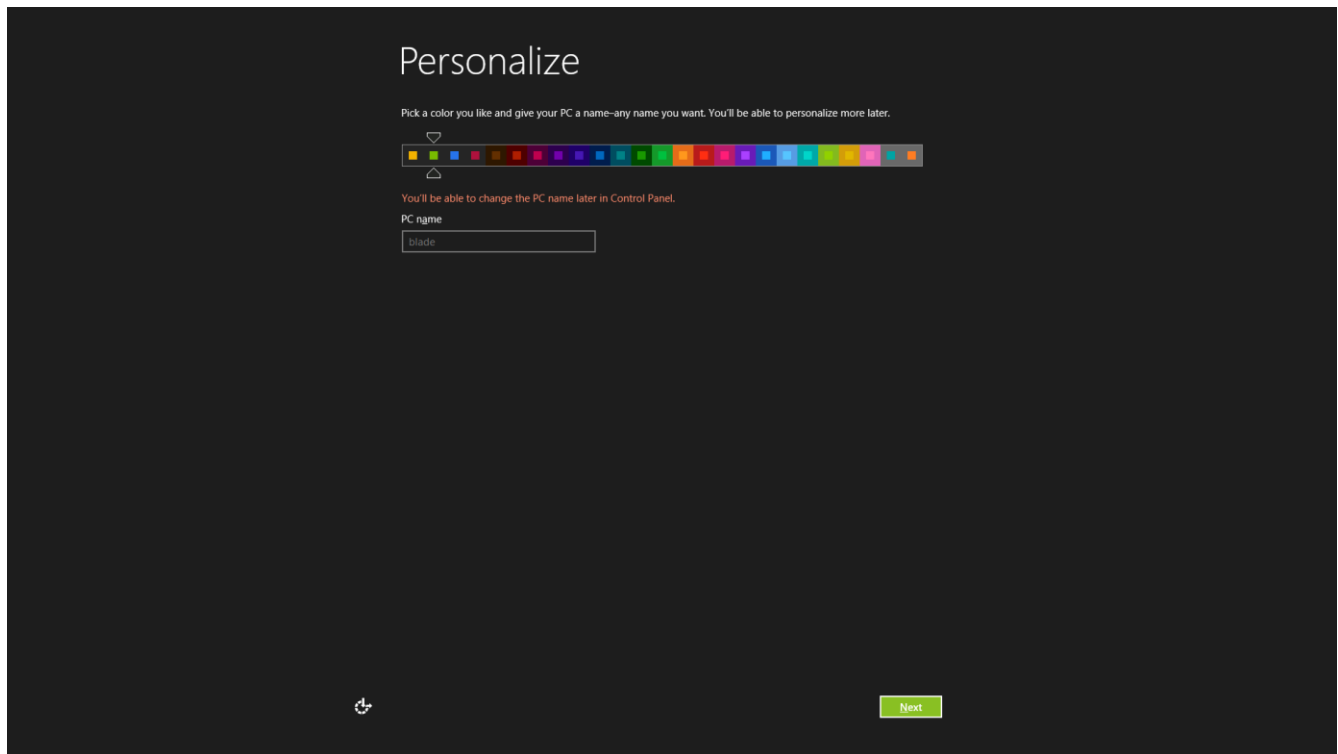


Tap **Next**.

5. Customize your system settings.

 The Setup Wizard includes a set of pre-configured settings that you can use to quickly set up your Windows device. Tap **Use express settings** to use the list of settings shown on the interface and skip to step 7 of this guide.

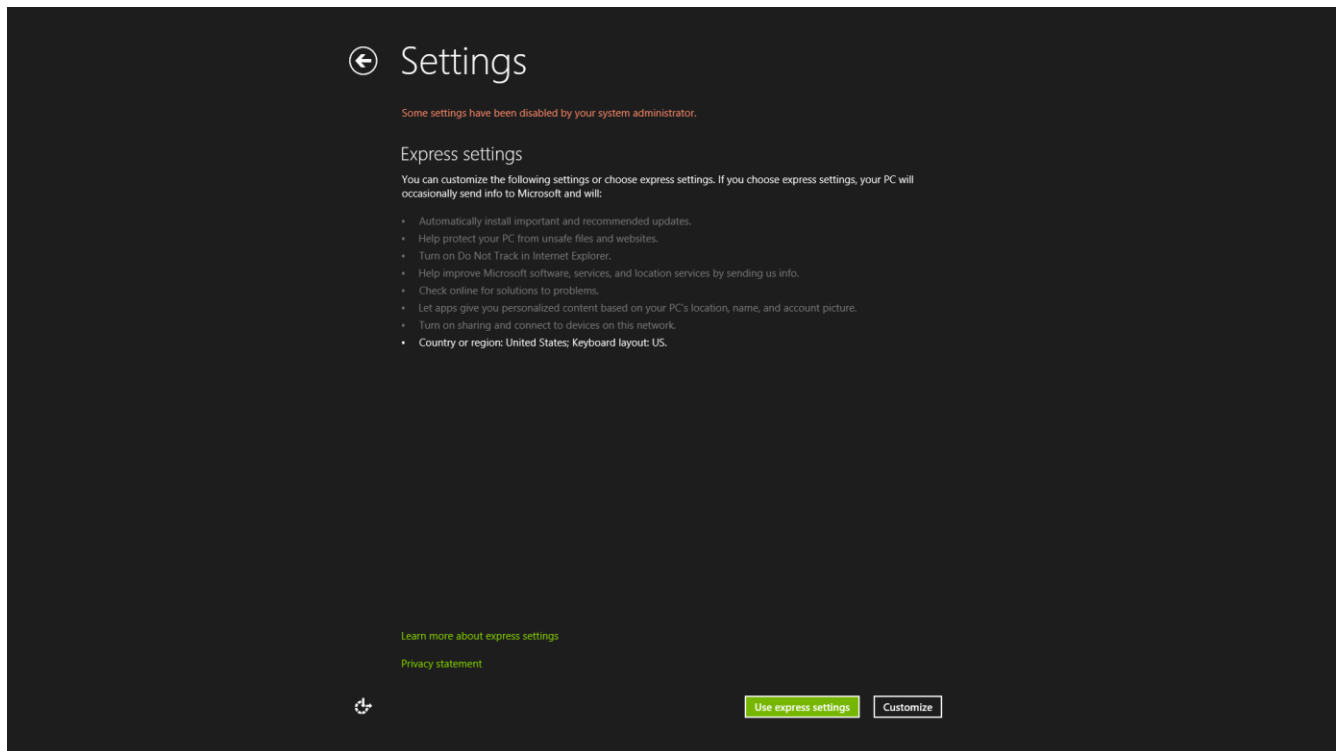

 
Alternatively, you can tap **Customize** to manually configure your Region, Language and Keyboard Layout.

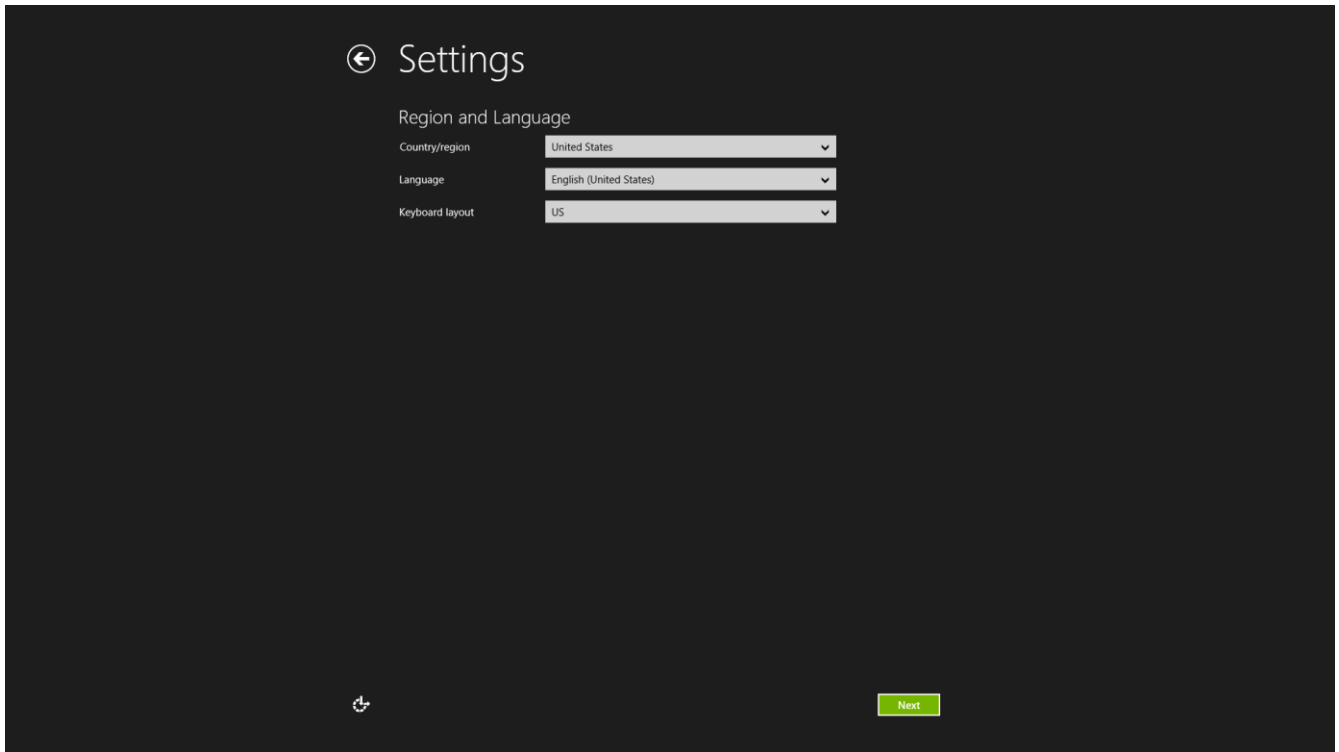

Tap **Next**.

6. Setup a login account.

 Enter your **User name** for logging into Windows. If you wish to secure your login with a password, fill out the **Password**, **Reenter password** and **Password hint** textboxes.

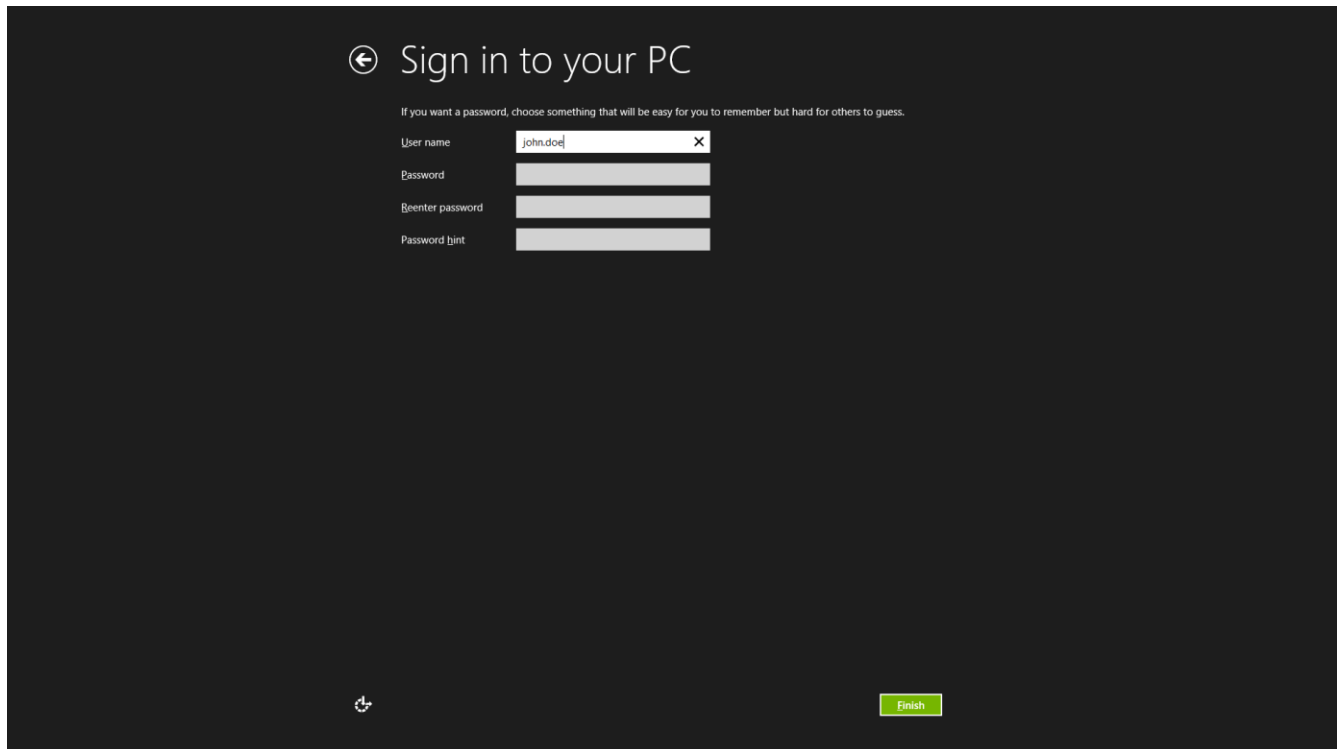

← Sign in to your PC

If you want a password, choose something that will be easy for you to remember but hard for others to guess.

User name john.doe X

Password

Reenter password

 
Password hint

Finish


Tap **Finish** to complete the Windows setup.

CONNECTING TO THE INTERNET


1. Activate the Charm bar by swiping the right edge of the screen.

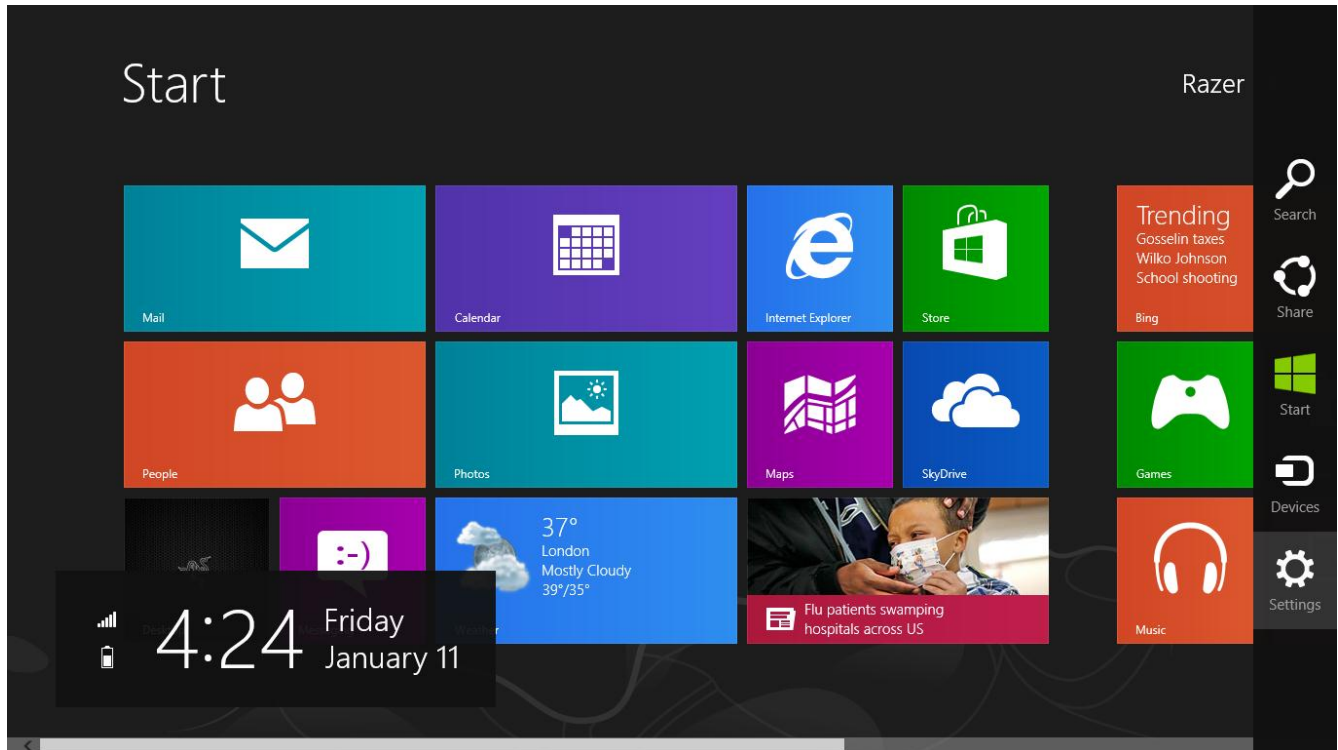

 
2. Tap the Settings icon on the Charm bar.

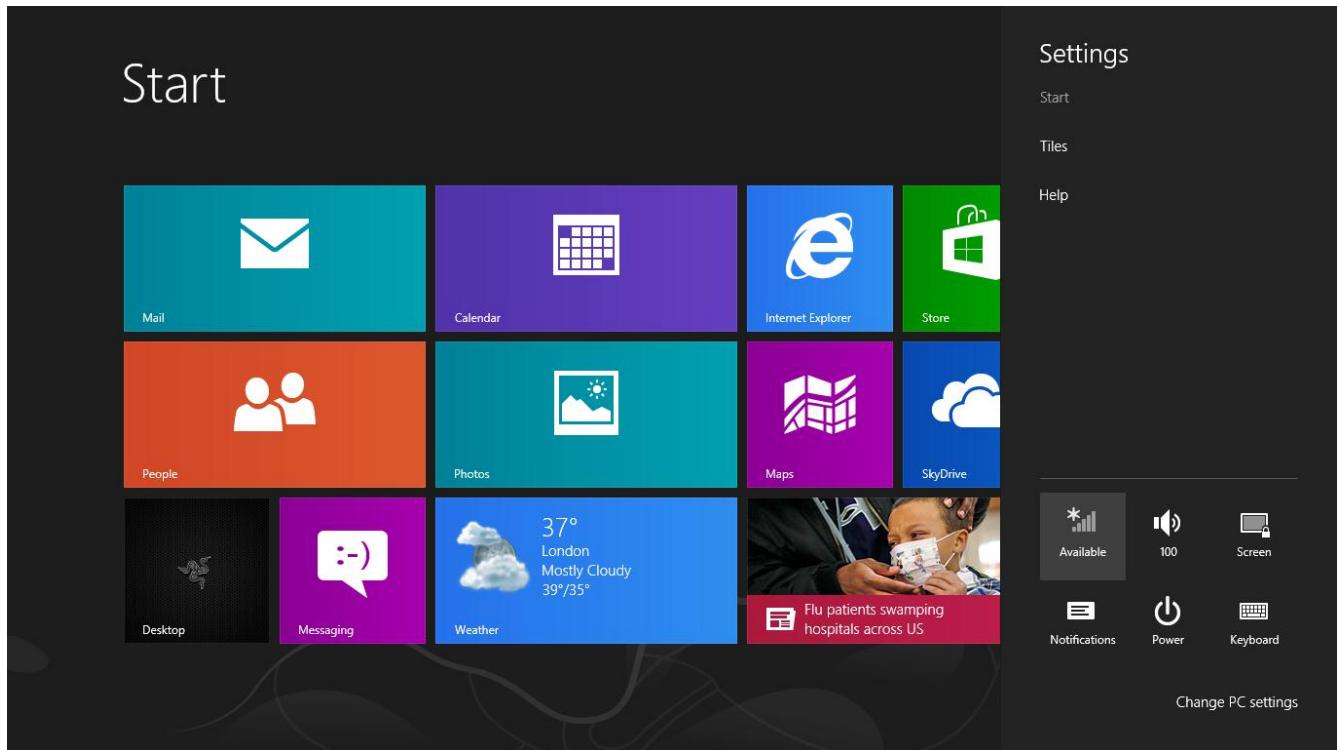

 
3. Tap the wireless network icon.

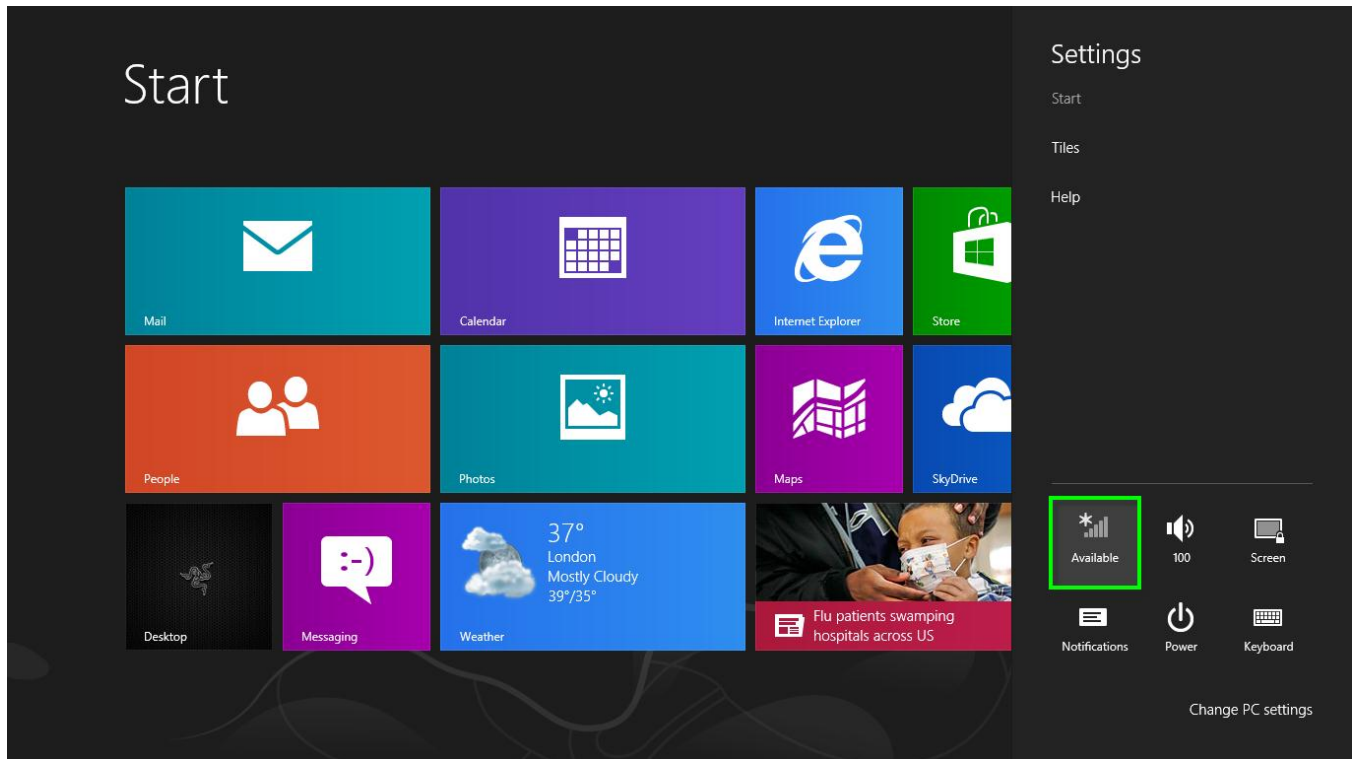

 
4. Tap the network you wish to connect to and tap **Connect**.

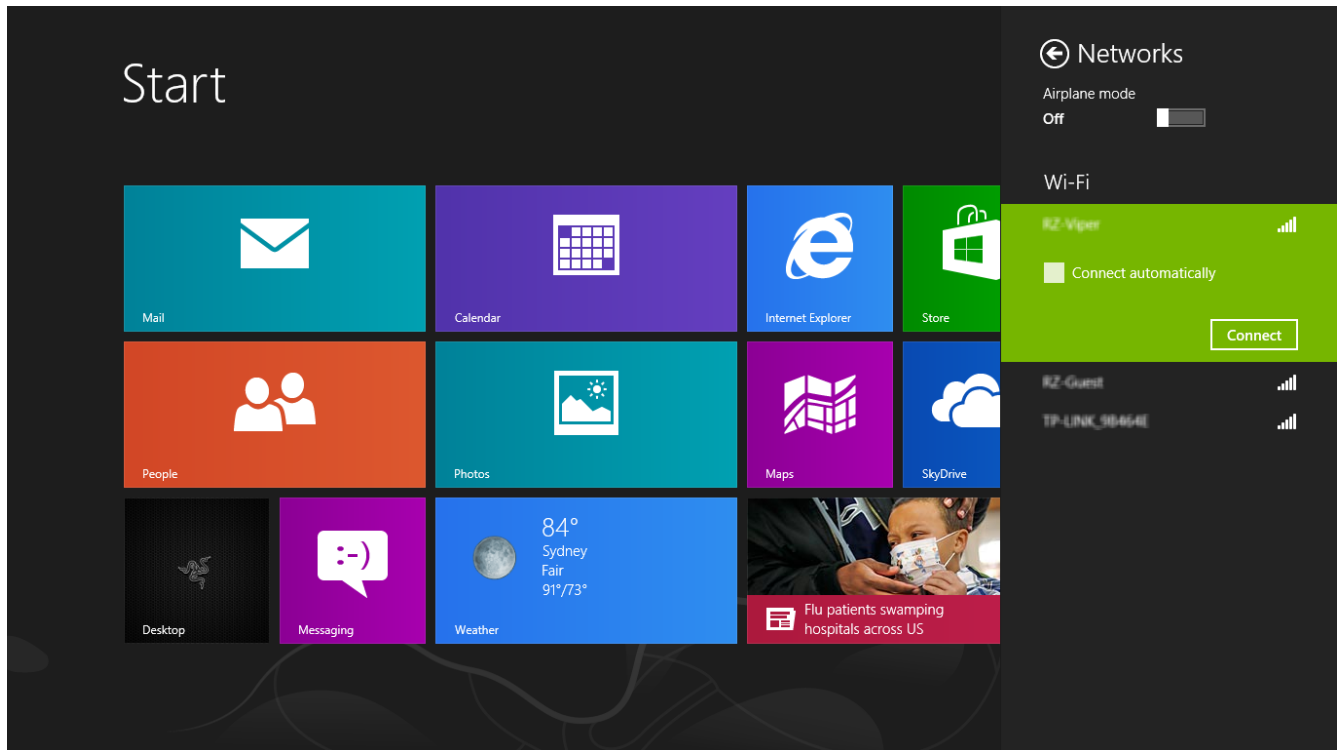

 5. Enter the network password (if any) and tap **Next**.

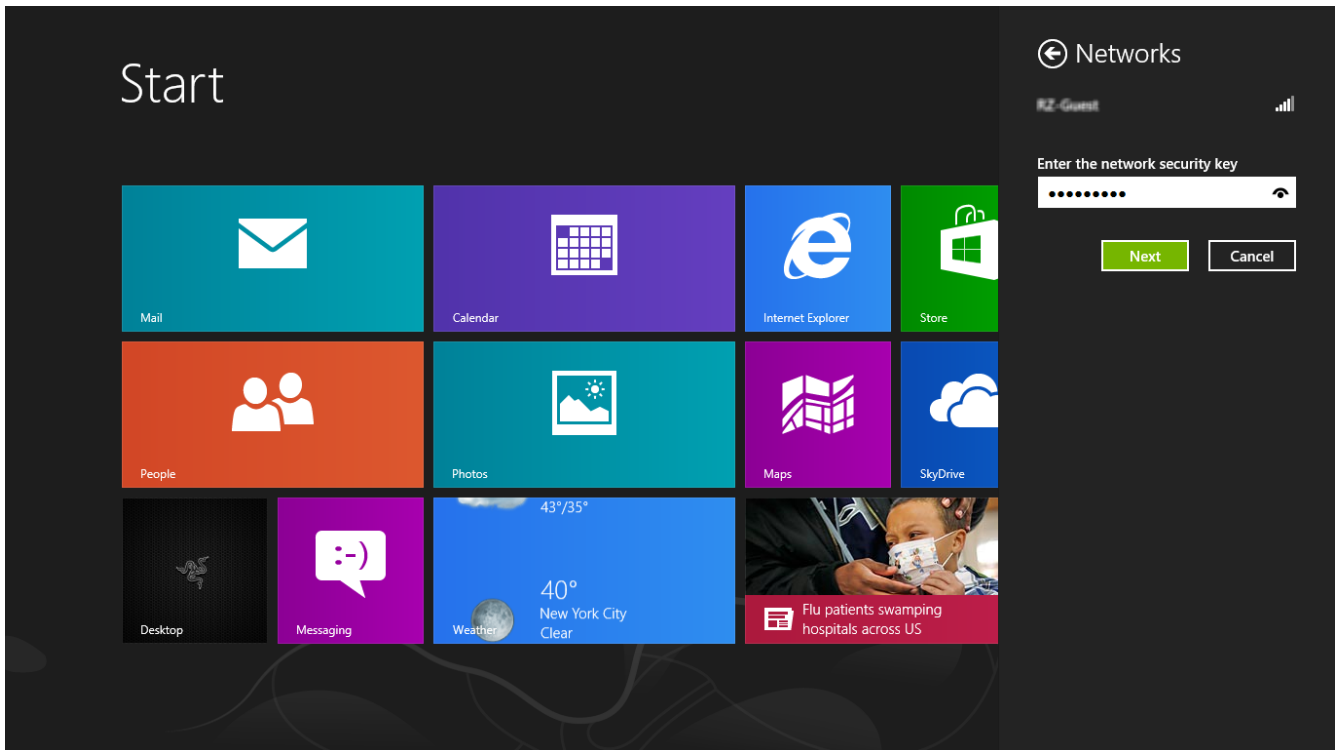

 6. Select whether to turn network sharing on/off.

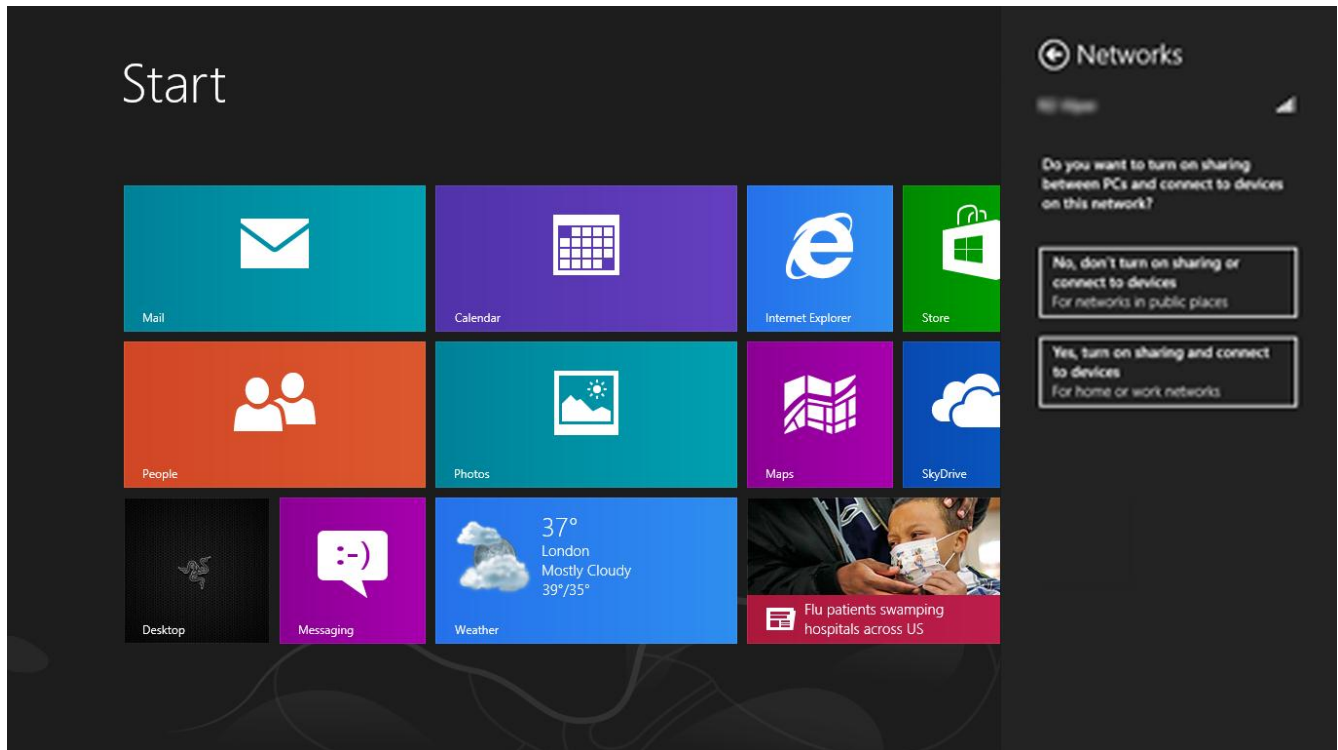

7. Once you are connected to the wireless network, tap anywhere outside the sidebar to return to the desktop.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Edge, we suggest that you adopt the following guidelines:

1. In case you have trouble operating the tablet properly and troubleshooting does not work, contact the Razer hotline or go to www.razersupport.com for support. Do not attempt to fix the device yourself.
2. Do not take apart the device (doing so will void your warranty) and do not operate it under abnormal conditions.
3. Keep your tablet away from liquid, humidity or moisture. Operate your tablet only within the specified temperature range of 0°C (32°F) to 35°C (95°F). Should you operate it in a temperature that is beyond this range, unplug and switch off the tablet to let the temperature stabilize within the optimal range.

BATTERY

The Razer Edge contains an internal rechargeable battery. In general, the life expectancy of this battery is dependent upon its use. If you suspect that the internal rechargeable battery is drained or has a low charge, try recharging it. If the battery does not recharge after several attempts, you may need to contact technical support.

IMPORTANT PRODUCT INFORMATION

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2012 Razer USA Ltd. Patent Pending. All Rights Reserved. Razer, the Razer Triple-Headed Snake logo, the Razer distressed word logo and other trademarks contained herein are the trademarks or registered trademarks of Razer Systems Pte Ltd. and/or its affiliated or associated companies, registered in the United States and/or other countries. Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer USA Ltd. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Edge (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit www.razerzone.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

COSTS OF PROCUREMENT

For the avoidance of doubt, in no event will Razer be liable for any costs of procurement unless it has been advised of the possibility of such damages, and in no case shall Razer be liable for any costs of procurement liability exceeding the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.

FCC DECLARATION OF CONFORMANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

For more information, refer to the online help system on www.razerzone.com.

FCC CAUTION STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

USAGE RESTRICTIONS

This Razer device was developed and designed to comply with the various wireless and telecom agency requirements throughout the world. This ensures that the device do not cause any harm to Public Switching Telecommunication Networks (PSTN) and do not violate any power and frequency spectrum allocations on a country by country basis. This device was also designed to be compliant with regulatory agency limits for Electromagnetic Compatibility (EMC).

IMPORTANT NOTICE FOR USE IN HEALTHCARE ENVIRONMENTS

This Razer device is not a medical device and is not listed under UL or IEC 60601 (or equivalent). This device should be kept at a certain distance to avoid harmful effects to patients or medical equipment.

AVIATION USAGE RESTRICTIONS

Certain restrictions apply to this device while onboard an aircraft. Razer encourages you to understand these restrictions to ensure the flight's safety and security.



Designed with gaming in mind, we focused on developing the most powerful tablet in the world that runs all PC games and applications. It's not just a tablet, but a PC and a console. The Razer Edge is the world's first tablet designed for PC gamers.

The latest Intel® Core™ i5/i7 processor and NVIDIA® GeForce® graphics are powering all of your favorite PC games and applications on a high definition multi-touch 10-inch display, in an ultra-portable form factor.

The Razer Edge elevates the gaming experience to all tablets out there. It's a Tablet, it's a PC, it's a Console. Pair the Razer Edge with the Razer Keyboard Dock to play any PC game out of the box, with the Gamepad Controller for mobile console gaming, or connect multiple gamepads to the Docking Station for a mobile or home console gaming experience.

TABLE OF CONTENTS

PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT	4
DEVICE LAYOUT.....	5
SETTING UP YOUR DOCKING STATION	6
SAFETY AND MAINTENANCE	8
LEGALESE	9

 
PACKAGE CONTENTS / REGISTRATION / TECHNICAL SUPPORT

PACKAGE CONTENTS

- Docking Station for Razer Edge
- Quick Start Guide

REGISTRATION

- Please visit www.razerzone.com/registration for online product registration.

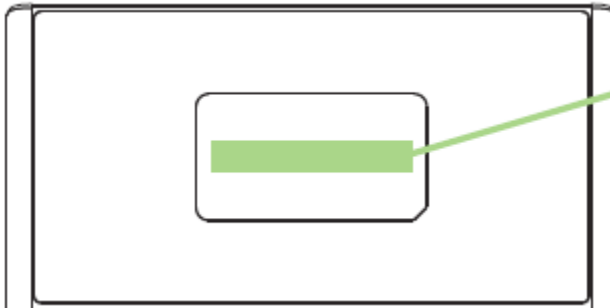

Your product's serial number can be found here.

 
Bottom View

TECHNICAL SUPPORT

What you'll get:

- 1 year limited manufacturer's warranty.
- Free online technical support at www.razersupport.com.


DEVICE LAYOUT

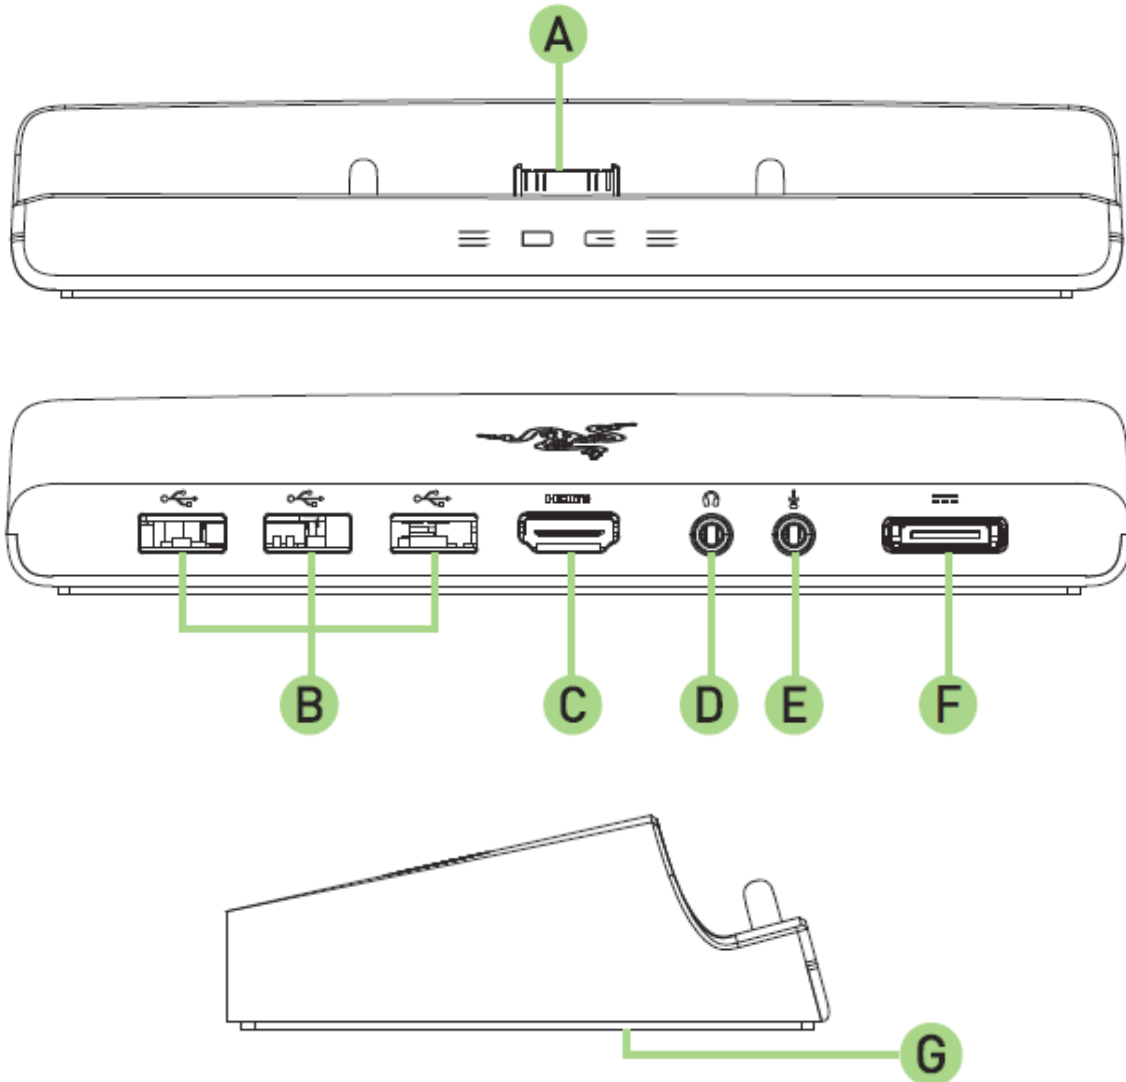


- A. Integrated Data / Power Connector
- B. USB 2.0 Ports
- C. HDMI Port
- D. Audio Out
- E. Microphone In
- F. Integrated Data / Power Port
- G. Non-Slip Rubber Base with Protective Film

SETTING UP YOUR DOCKING STATION

 
1. Remove the protective film.

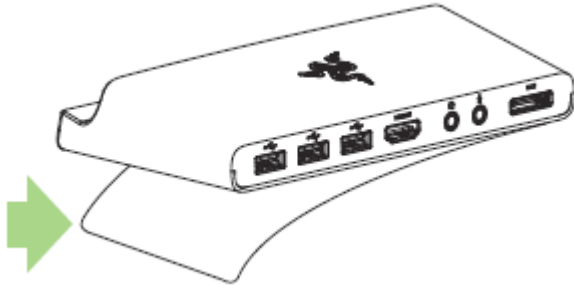

 
2. Place the docking station on your desk.

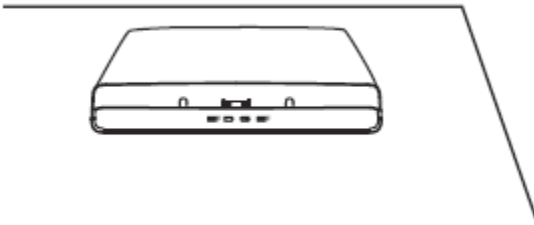

 3. Connect the power adapter.

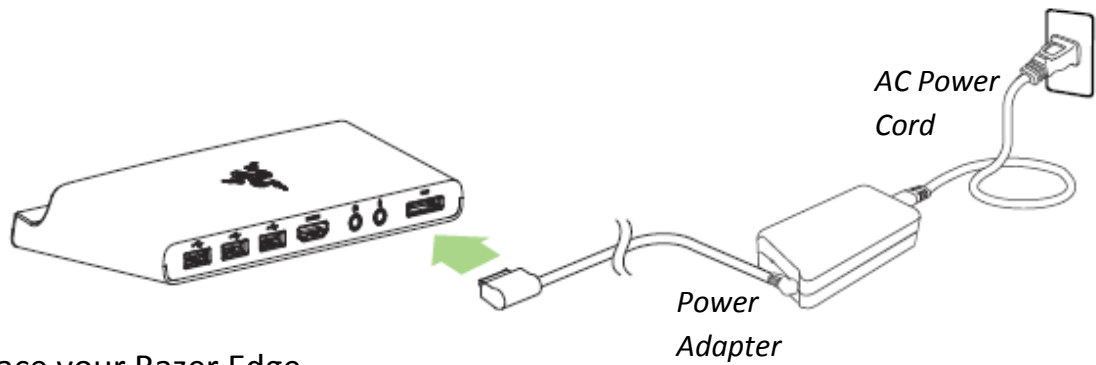


 4. Place your Razer Edge.

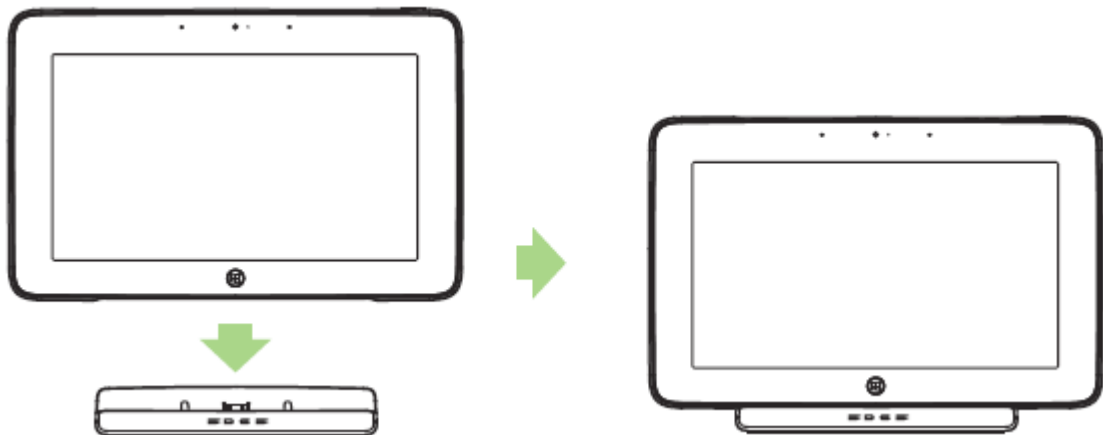


5. Connect your other peripherals to the Docking Station.

 
PC Gaming Mode

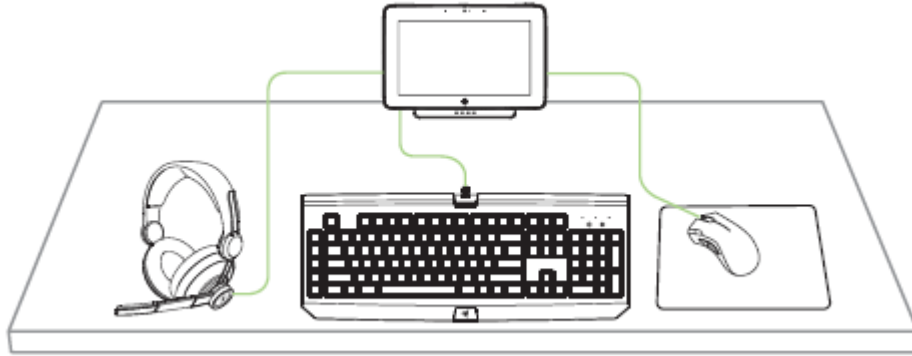

Console Gaming Mode

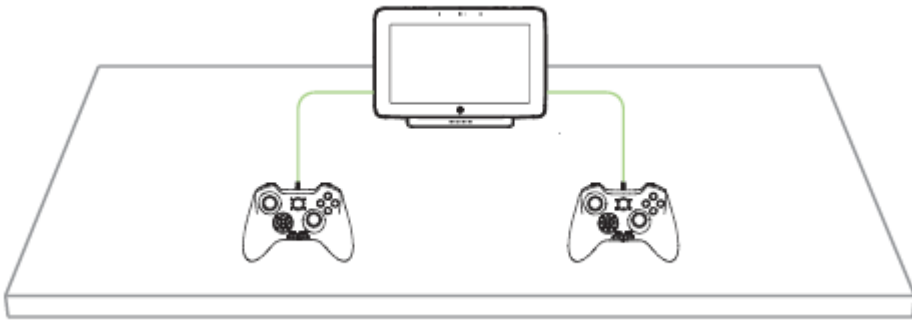 

Home Entertainment Mode

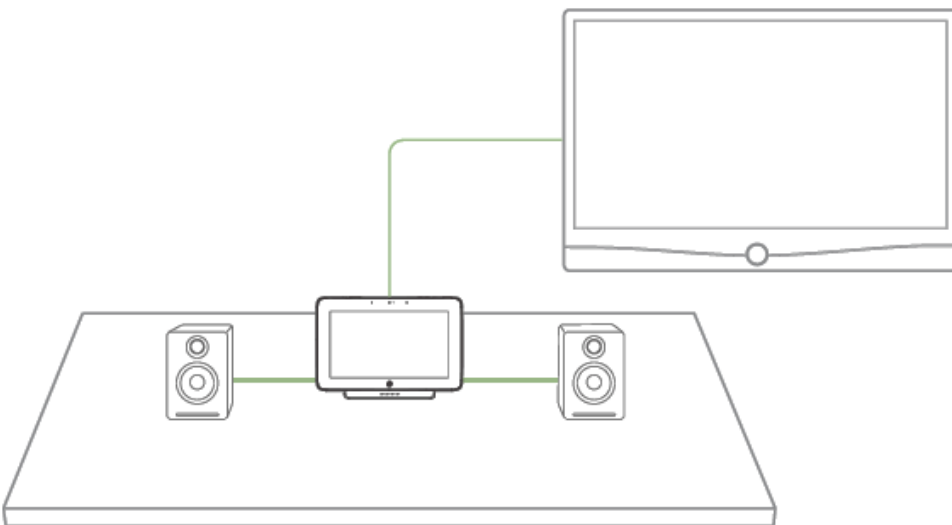 

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Docking Station, we suggest that you adopt the following guidelines:

1. Should you have trouble operating the device properly and troubleshooting does not work, contact the Razer hotline or go to www.razersupport.com for support. Do not attempt to service or fix the device yourself at any time.
2. Do not take apart the device (doing so will void your warranty) and do not operate it under abnormal current loads.
3. Keep your device away from liquid, humidity or moisture. Operate your device only within the specified temperature range of 0°C (32°F) to 35°C (95°F). Should you operate it in a temperature that is beyond this range, unplug and switch off the device in order to let the temperature stabilize within the optimal temperature range.

MAINTENANCE AND USE

The Docking Station requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton swab with a bit of warm water to prevent dirt build-up. Do not use soap or harsh cleaning agents.

LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2012 Razer USA Ltd. Patent Pending. All Rights Reserved. Razer, the Razer Triple-Headed Snake logo, the Razer distressed word logo and other trademarks contained herein are trademarks or registered trademarks of Razer USA Ltd and/or its affiliated or associated companies, registered in the United States and/or other countries.

Razer USA Ltd (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Docking Station for Razer Edge (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit www.razerzone.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

COSTS OF PROCUREMENT

For the avoidance of doubt, in no event will Razer be liable for any costs of procurement unless it has been advised of the possibility of such damages, and in no case shall Razer be liable for any costs of procurement liability exceeding the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.